

# GardenSHED

2.99W x 1.51D x 2.08Hm | Double Sliding Door



[www.pinnacle.net.au](http://www.pinnacle.net.au)

Skillion Series


Assembly instructions

Check out our  
shed building  
tips on YouTube!



AU: 1800 349 776

NZ: 09 276 4071

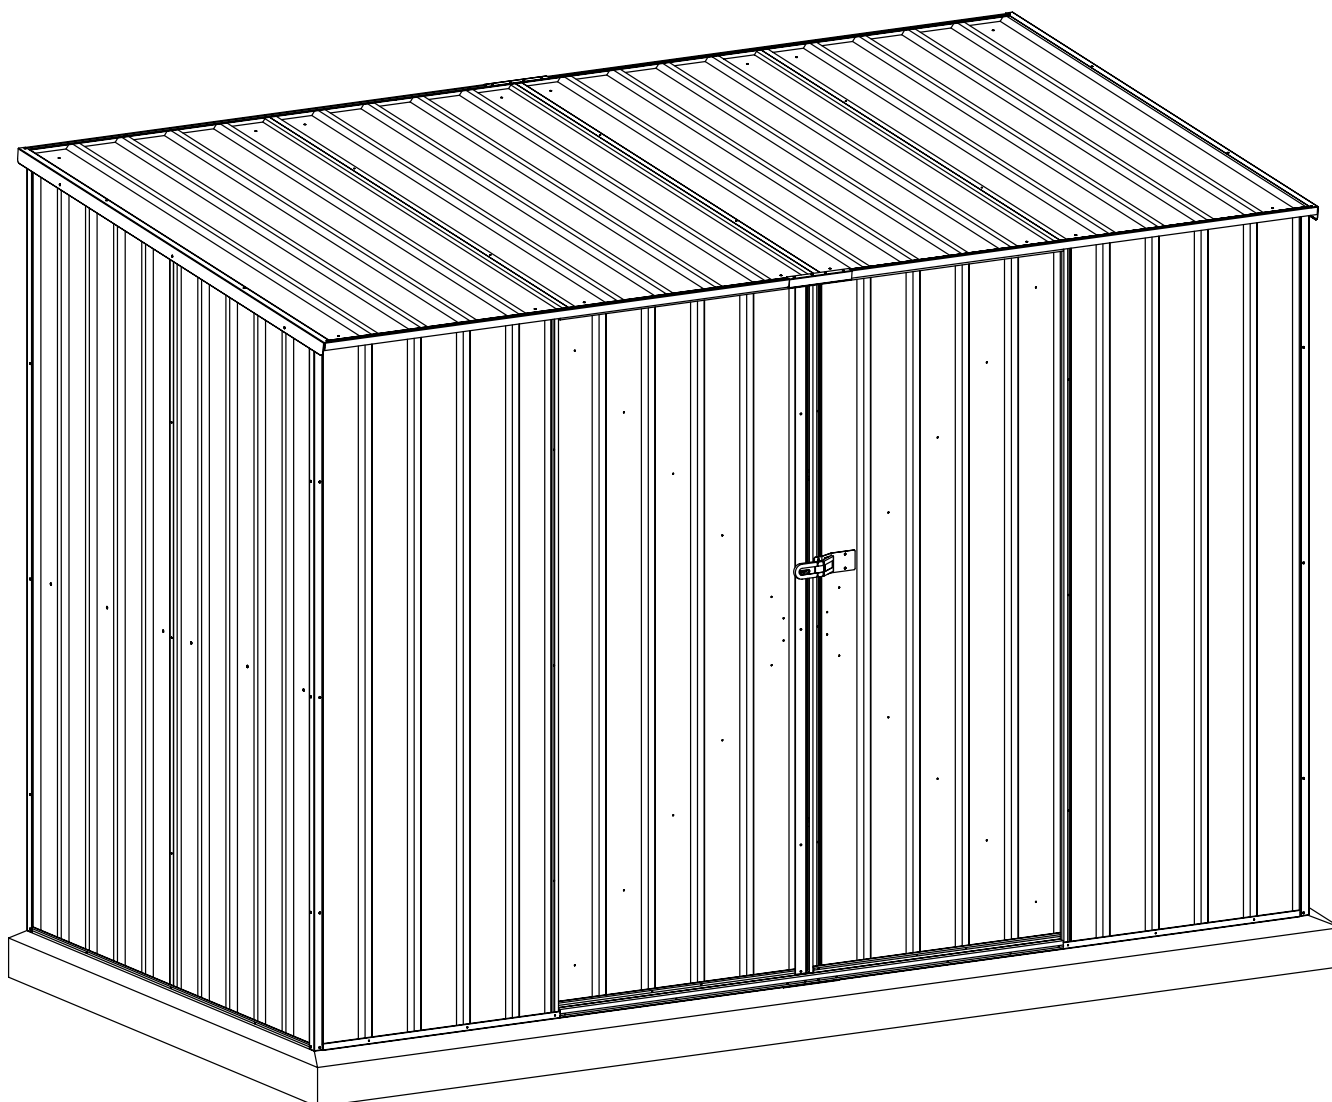

**Congratulations** on purchasing your new Pinnacle Garden Shed. Before assembling, we recommend you read the instructions thoroughly. Your new shed comes with pre-drilled holes to make assembly quicker. We recommend you assemble the shed using a trestle table or sawhorses and planks. This will ensure that you are working off the ground and make it easier for you.

**Assembly of this shed is a three-person job and should not be attempted in windy conditions.**


## SAFETY TIP:

When assembling or installing this product wear protective gloves and eyewear.

**Tools required:** Drill, measuring tape, phillips-head screw driver, rivet gun, rubber mallet, sturdy ladder, shifting spanner, 2 saw horses, 3mm steel drill bit, 4mm steel drill bit and a 10mm masonry drill bit.

# GardenShed 2.99W x 1.51D x 2.08Hm

## Dimension overview:

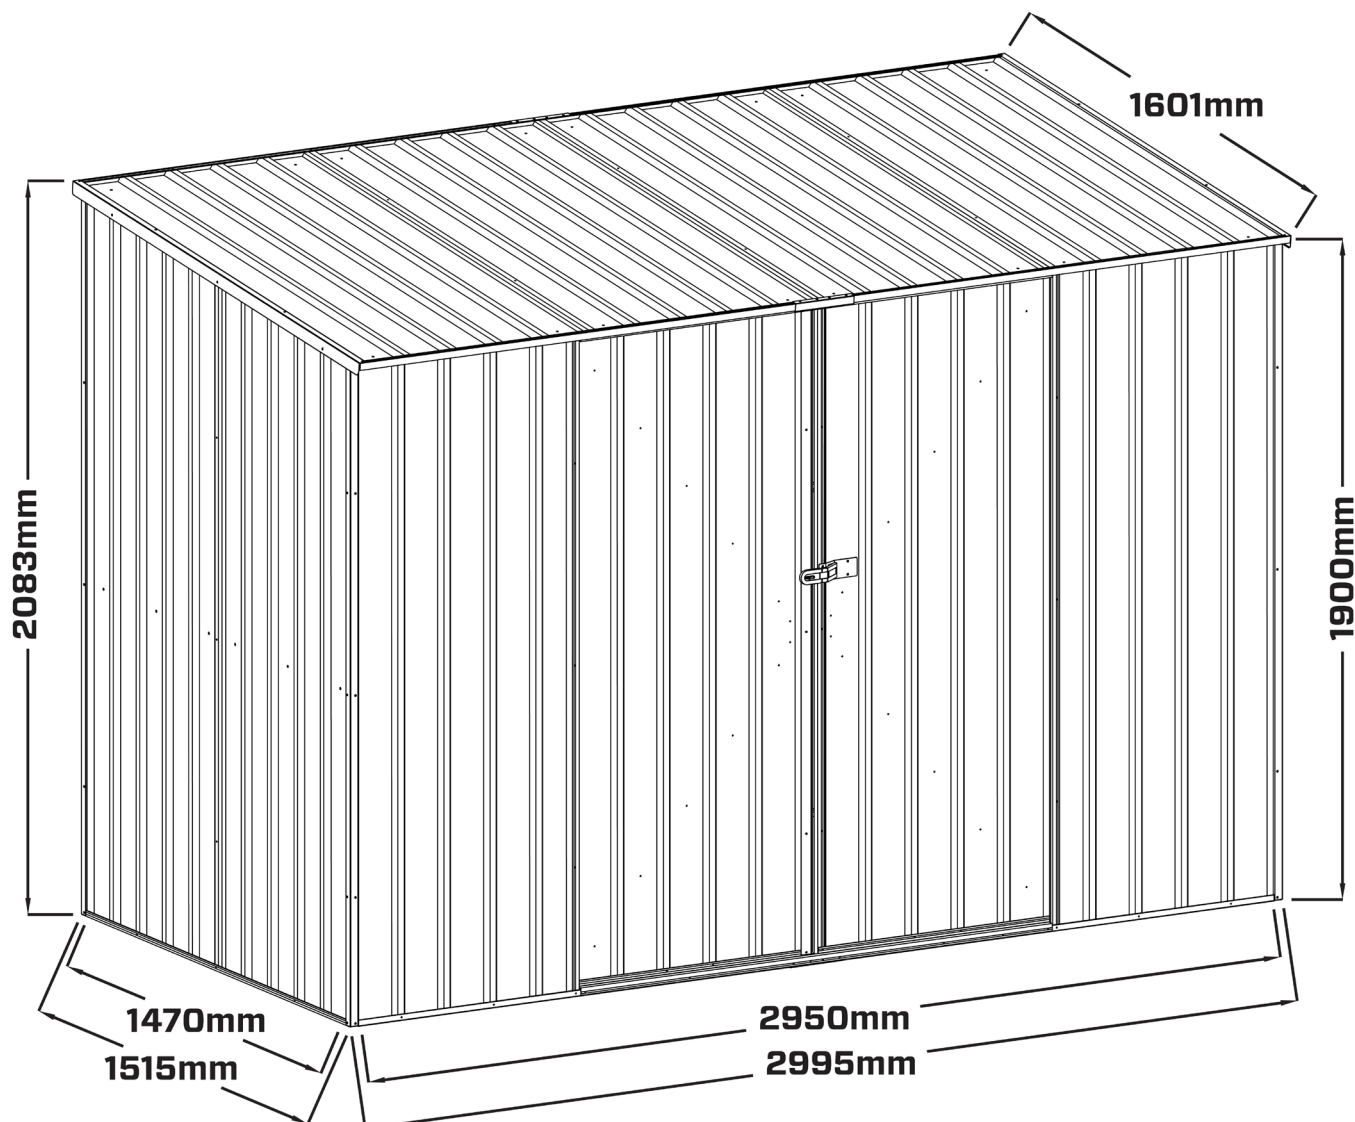

<b>Outer base dimensions</b>	2995 x 1515 mm
<b>Inner base dimensions</b>	2950 x 1470 mm
<b>Wall height</b>	1900 mm
<b>Peak height</b>	2083 mm
<b>Roof width</b>	1601 mm
<b>Door opening dimensions</b>	1850 x 1515 mm

### Build your garden shed in 7 easy steps!

**Step 1:** Check all parts against the component list

**Step 2:** Assemble the rear wall panels

**Step 3:** Assemble the side wall panels

**Step 4:** Assemble the roof panels

**Step 5:** Assemble the front doors


**Step 6:** Assemble the front wall panel

**Step 7:** Fit the panels together


**Warning:** Do not assemble this shed on a windy day.

**Warning:** This shed must be fully assembled and anchored to a concrete slab using the supplied bolt down kit in one session/ day. The shed must not be left partly assembled.

**Assembly recommendations:** We recommend a minimum of three people are needed to assemble this shed.

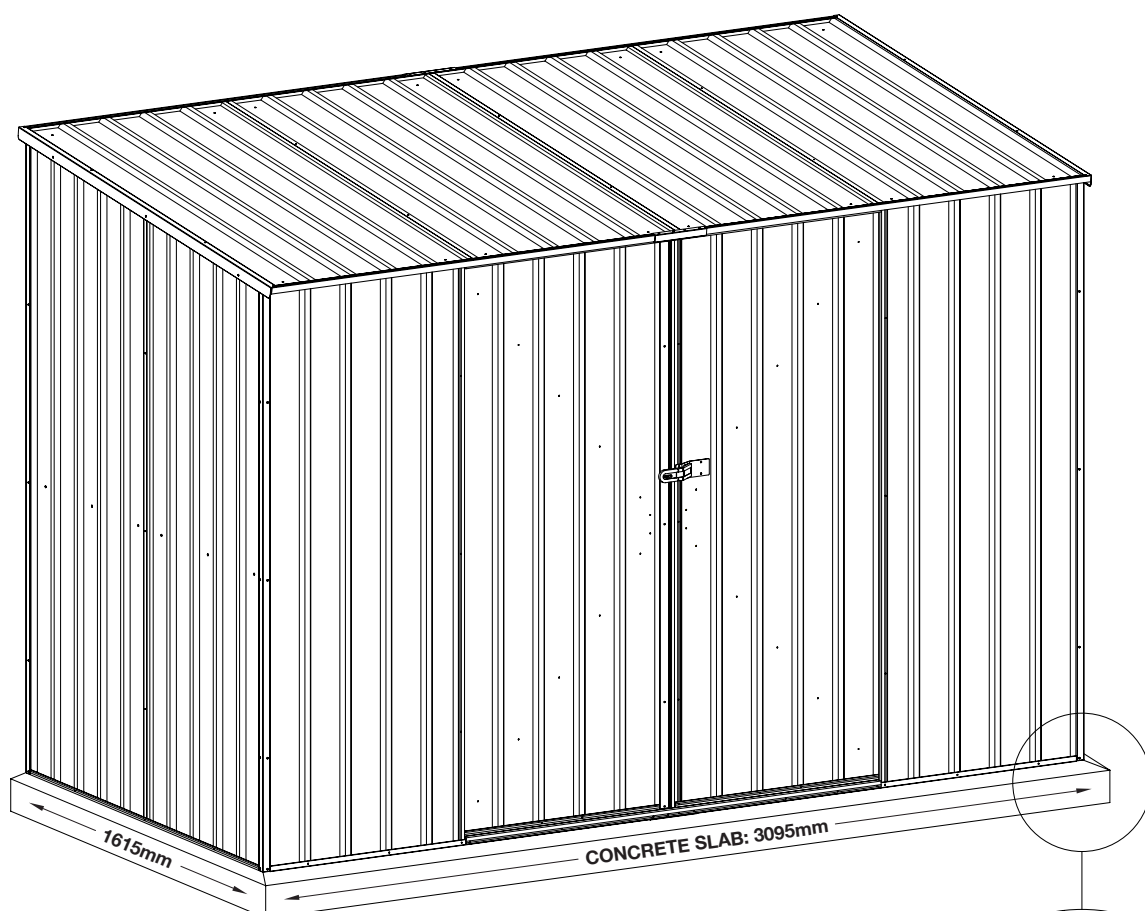



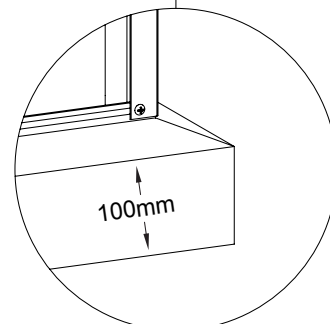








**Concrete slab:** Please ensure that your site is level. It is recommended that your slab is 100mm thick and you use builder's plastic and F52 reinforcing mesh. We recommend that you make your slab 100mm bigger than the base dimensions of your garden shed. This will allow for a 50mm edge around your garden shed. We recommend that you slope the 50mm edges downward by 10mm so that rainwater can drain away from your garden shed.









 





# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 1: Check all parts against the component list













Lay out all parts with number facing outwards and check off against parts list.









Picture	Description	Component	Location	Part No.	QTY	BOX	Check
	Sheet	Size: 2057x770mm	Rear wall	6A	4	1	
	Sheet	Size: 1977-2057x770mm	Side wall	7A	1	1	
	Sheet	Size: 1977-2057x770mm	Side wall	7B	1	1	
	Sheet	Size: 1900-1980x770mm	Side wall	2D	1	1	
	Sheet	Size: 1900-1980x770mm	Side wall	2L	1	1	
	Sheet	Size: 1600x770mm	Roof	8	4	2	
	Sheet	Size: 1900x735mm	Front	SS06	2	2	
	Door Sheet	Size: 1868x770mm	Door	5A	1	2	
	Door Sheet	Size: 1868x770mm	Door	5F	1	2	
	Channel	Length: 1867mm	Door	SC29	1	2	
	Channel	Length: 1867mm	Door	SC30	2	2	

Picture	Description	Component	Location	Part No.	QTY	BOX	Check
	Channel	Channel 768mm	Door	21P	4	2	
	Jamb	Length: 1853mm	Door	J6	1	2	
	Brace	Length: 1075mm	Door	U4	4	2	
	Channel	Length: 1494mm	Roof	27A	2	1	
	Channel	Length: 1494mm	Roof	27B	2	1	
	Channel	Length: 1494mm	Rear wall	27C	1	1	
	Channel	Length: 1494mm	Rear wall	27D	1	1	
	Channel	Length: 1494mm	Rear wall	27H	1	1	
	Channel	Length: 1494mm	Rear wall	27I	1	1	
	Channel	Length: 1494mm	Front	27Q	1	1	
	Channel	Length: 1494mm	Front	27R	1	1	
	Channel	Length: 1494mm	Front	27S	1	1	

# GardenShed

















2.99W x 1.51D x 2.08Hm

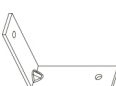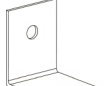Picture	Description	Component	Location	Part No.	QTY	BOX	Check
	Channel	Length: 1494mm	Front	27T	1	1	
	Channel	Length: 1514mm	Front	C26	2	2	
	Channel	Length: 1508mm	Side wall	20A	2	2	
	Channel	Length: 1516mm	Side wall	25	2	2	
	Channel	Length: 1898mm	Front	22E	2	2	
	Channel	Length: 1401mm	Side wall	SC05	2	2	
	Channel	Length: 1440mm	Rear wall	SC12	1	1	
	Channel	Length: 1440mm	Rear wall	SC13	1	1	
	Top Track	Length: 1470mm	Front	O1	1	1	
	Top Track	Length: 1470mm	Front	O2	1	1	
	Bottom Track	Length: 1470mm	Front	O3	1	1	
	Bottom Track	Length: 1470mm	Front	O4	1	1	

Picture	Description	Component	Location	Part No.	QTY	BOX	Check
	Jamb	Length: 1898mm	Corner	Z19	1	1	
	Jamb	Length: 1898mm	Corner	Z44	1	1	
	Jamb	Length: 2055mm	Corner	Z21	1	1	
	Jamb	Length: 2055mm	Corner	Z22	1	1	
	Lip	Length: 1601mm	Roof	51	2	2	
	Joining brace	Brace	Door	W	2	2	
	Channel connector	Length: 188mm	Rear wall / roof	66	4	2	
	Track connector	Length: 178mm	Front	66A	2	2	

# GardenShed 2.99W x 1.51D x 2.08Hm

## Fittings part list:

Picture	Component	QTY	Picture	Component	QTY	
	Self-tapping screws (10mm)	200		Self-tapping screws (16mm)	55	
	3.0 x 10mm Rivet	72		4.0 x 10mm Rivet	26	
	Hasp (Part C4)	1		Staple	1	
	Mid wall brace (part 72)	2		Base bracket	7	
	5/16" x 19mm hex bolt	7		5/16" Hexagonal nut	7	
	Mid-wall channel connector	1		Self-tapping screw safety cover	25	
	Channel safety cover (Left)	1		Channel safety cover (Right)	1	
	Plastic Stopper	8		Sleeve anchor bolt	7	

Qty checking date: \_\_\_\_ / \_\_\_\_ / \_\_\_\_


Qty checking personal badge number: \_\_\_\_\_

Signature: \_\_\_\_\_

In the unlikely event that you find you are missing a part, please contact Pinnacle on 1800 349 776. A copy of proof of purchase may be requested.




## Garden shed overview:

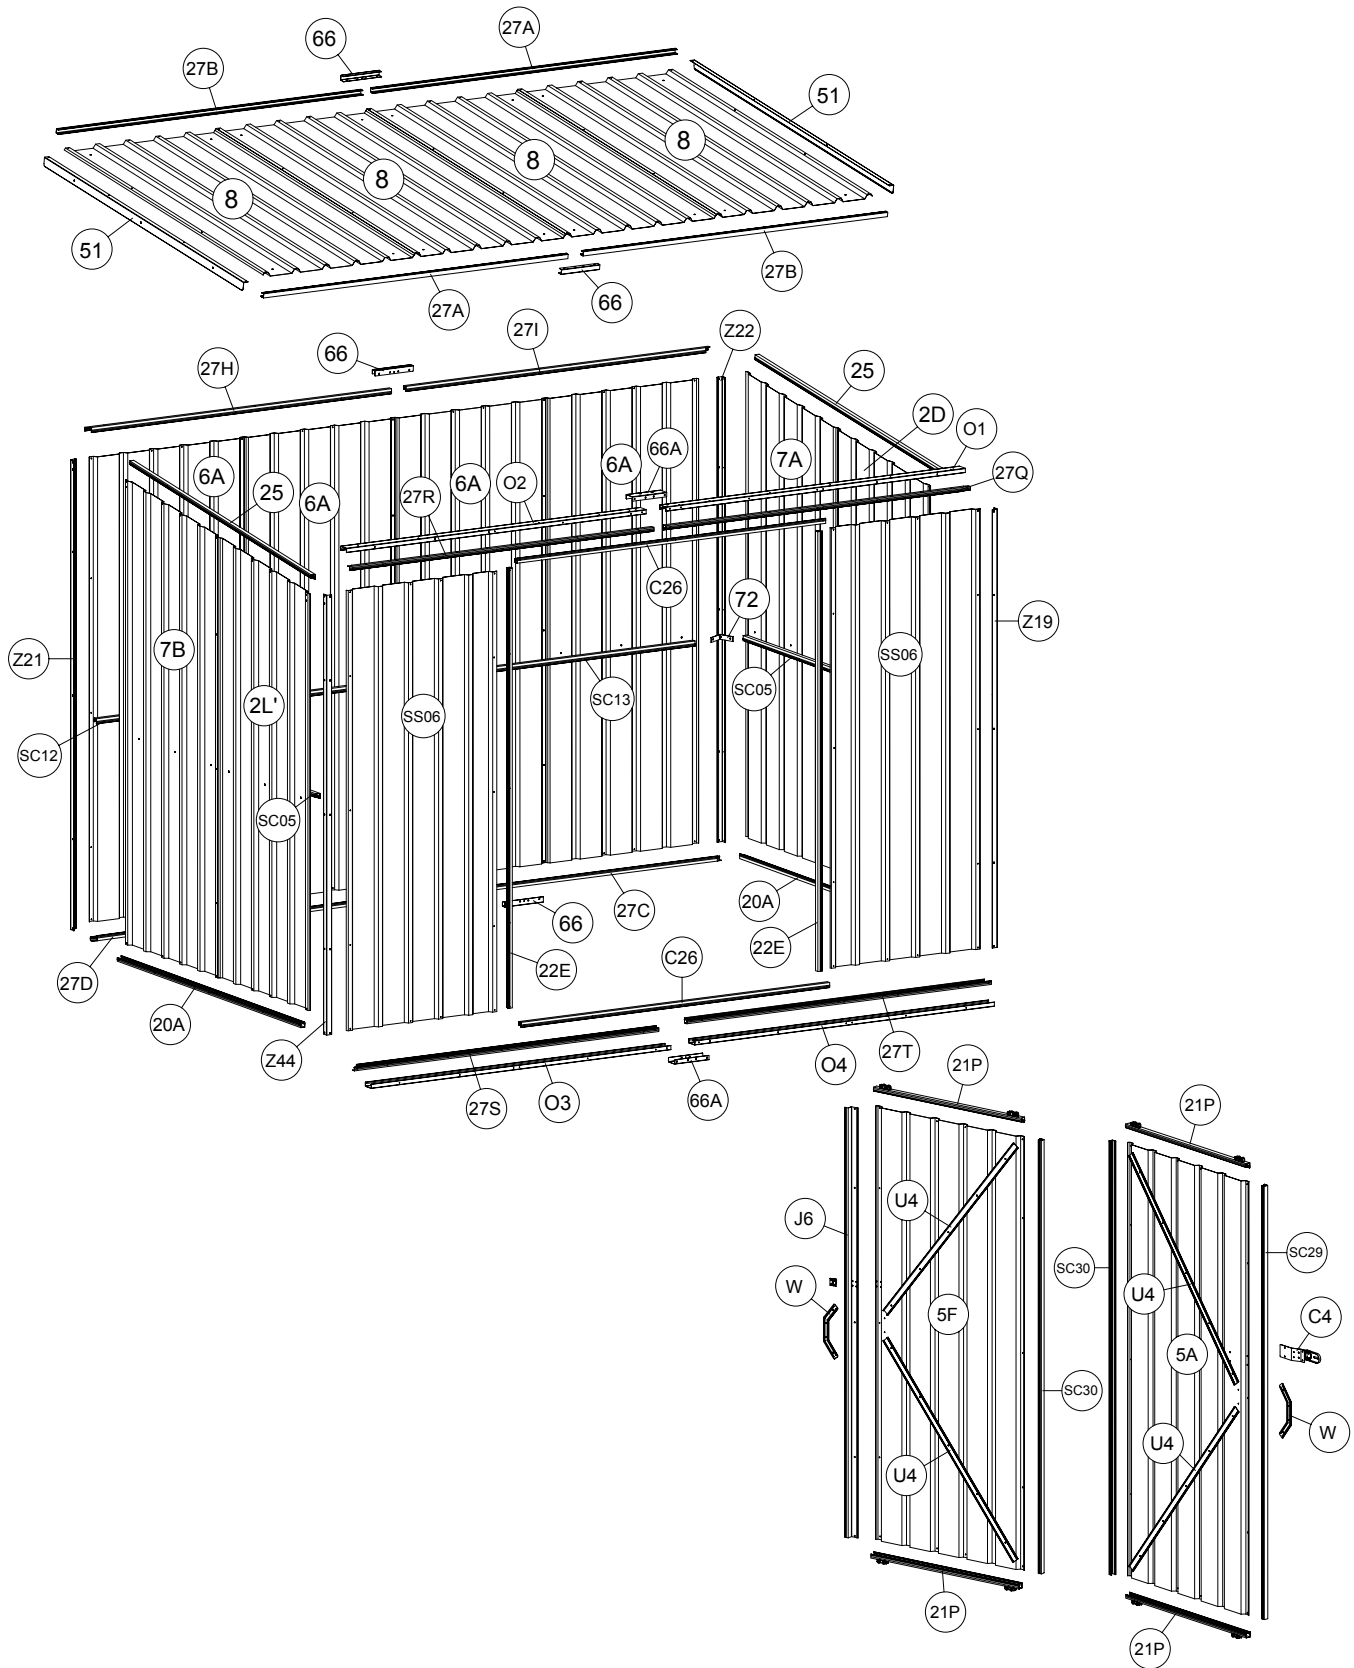


# GardenShed 2.99W x 1.51D x 2.08Hm


## Step 2: Assemble the rear wall panels

You will find it easier to assemble your shed using sawhorses with timber studs attached (timber needs to be the same length as the shed (3.0m)) or alternatively, a trestle table.

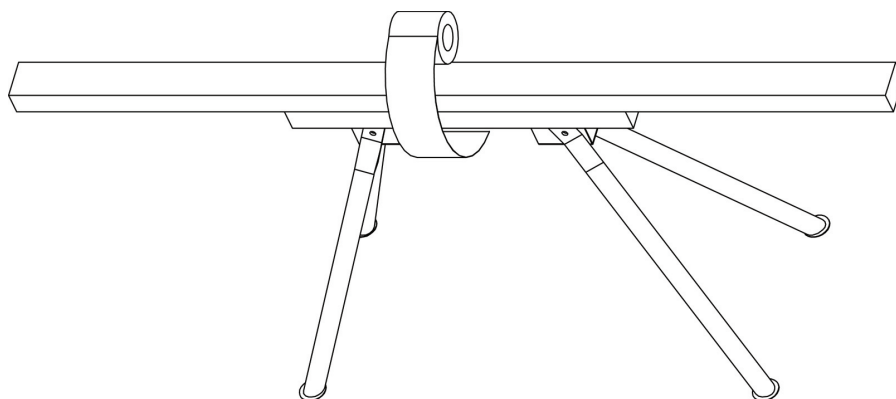

Place 4 x part 6A (Sheet) on your worktable and then position parts 27I, 27H (top channel) and parts 27C, 27D (bottom channel) to the sheeting by tapping (diagram A) or sliding them into place (diagram B). Make sure the small lip of the channel is always facing out. This ensures rain water cannot build up inside your shed. Make sure parts 27I and 27H are used as top side channels as per the diagram below.

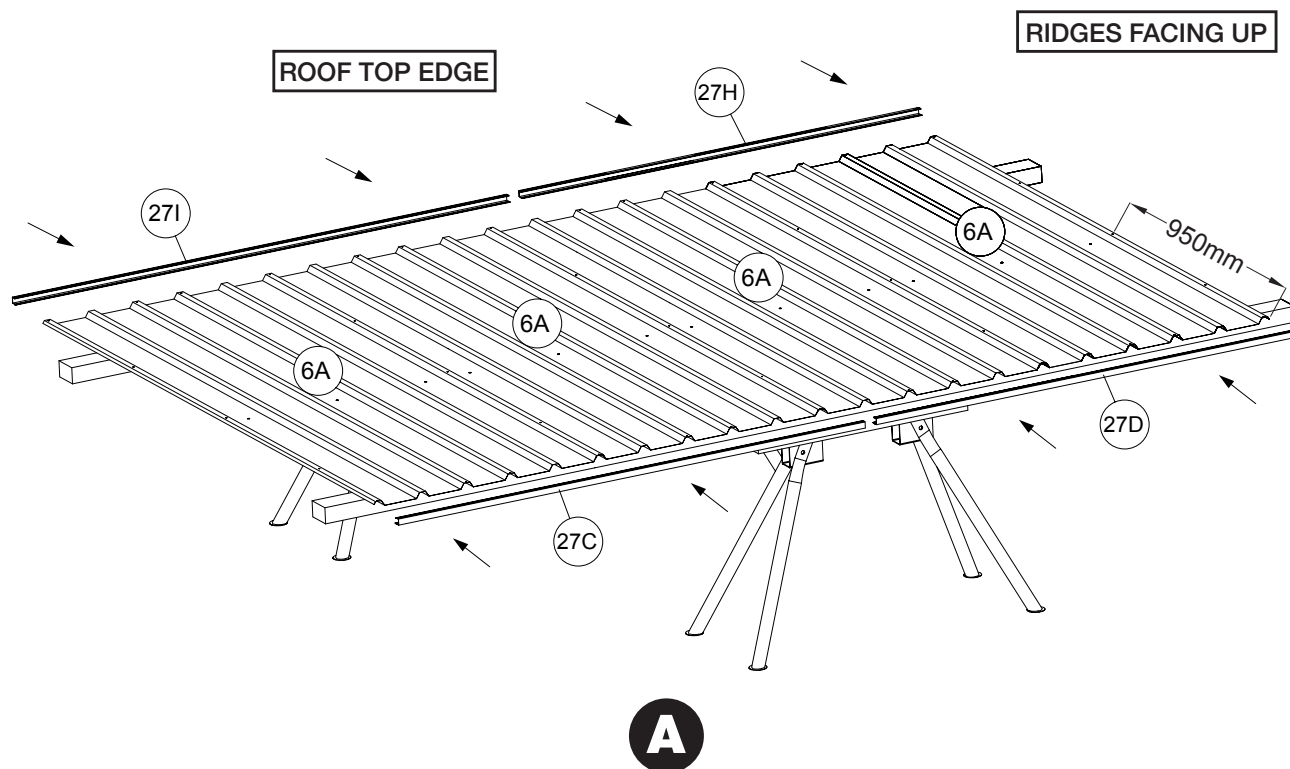

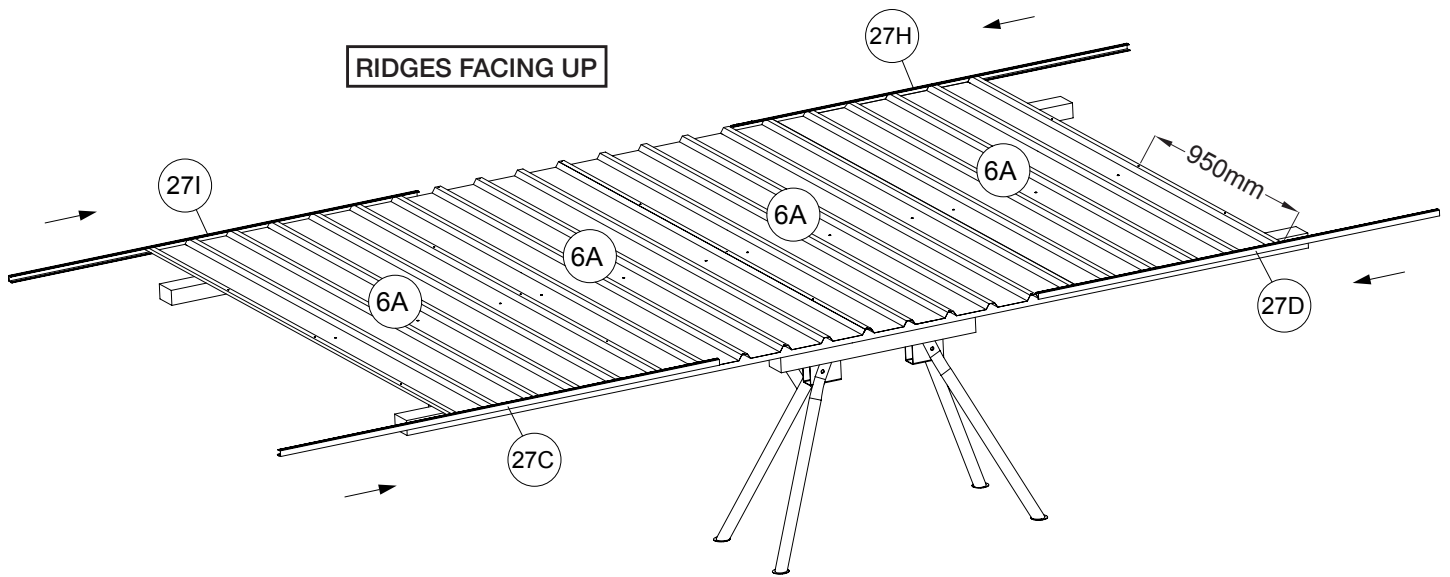

**B**


Tip: If panel and screw holes do not line up, try pulling panel to match up holes.

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 2: Assemble the rear wall panels (continued)


Now fix parts SC13 and SC12 (mid wall channels) joined by mid wall channel connector to the sheeting with self-tapping screws.

Please note that the groove should face downwards. Fix other channels with self-tapping screws. **TIP** (before applying part 66 (channel connectors)): to help panel and screw holes to line up, fasten screws one at a time from one side of the wall to the other and pull panel away from screw each time to match up holes. Apply part 66 (channel connector) on top and bottom channels to enhance the strength. **NOTE:** Screws are applied to both sides of the connectors. All screws marked with a cross should not be fixed at this stage.

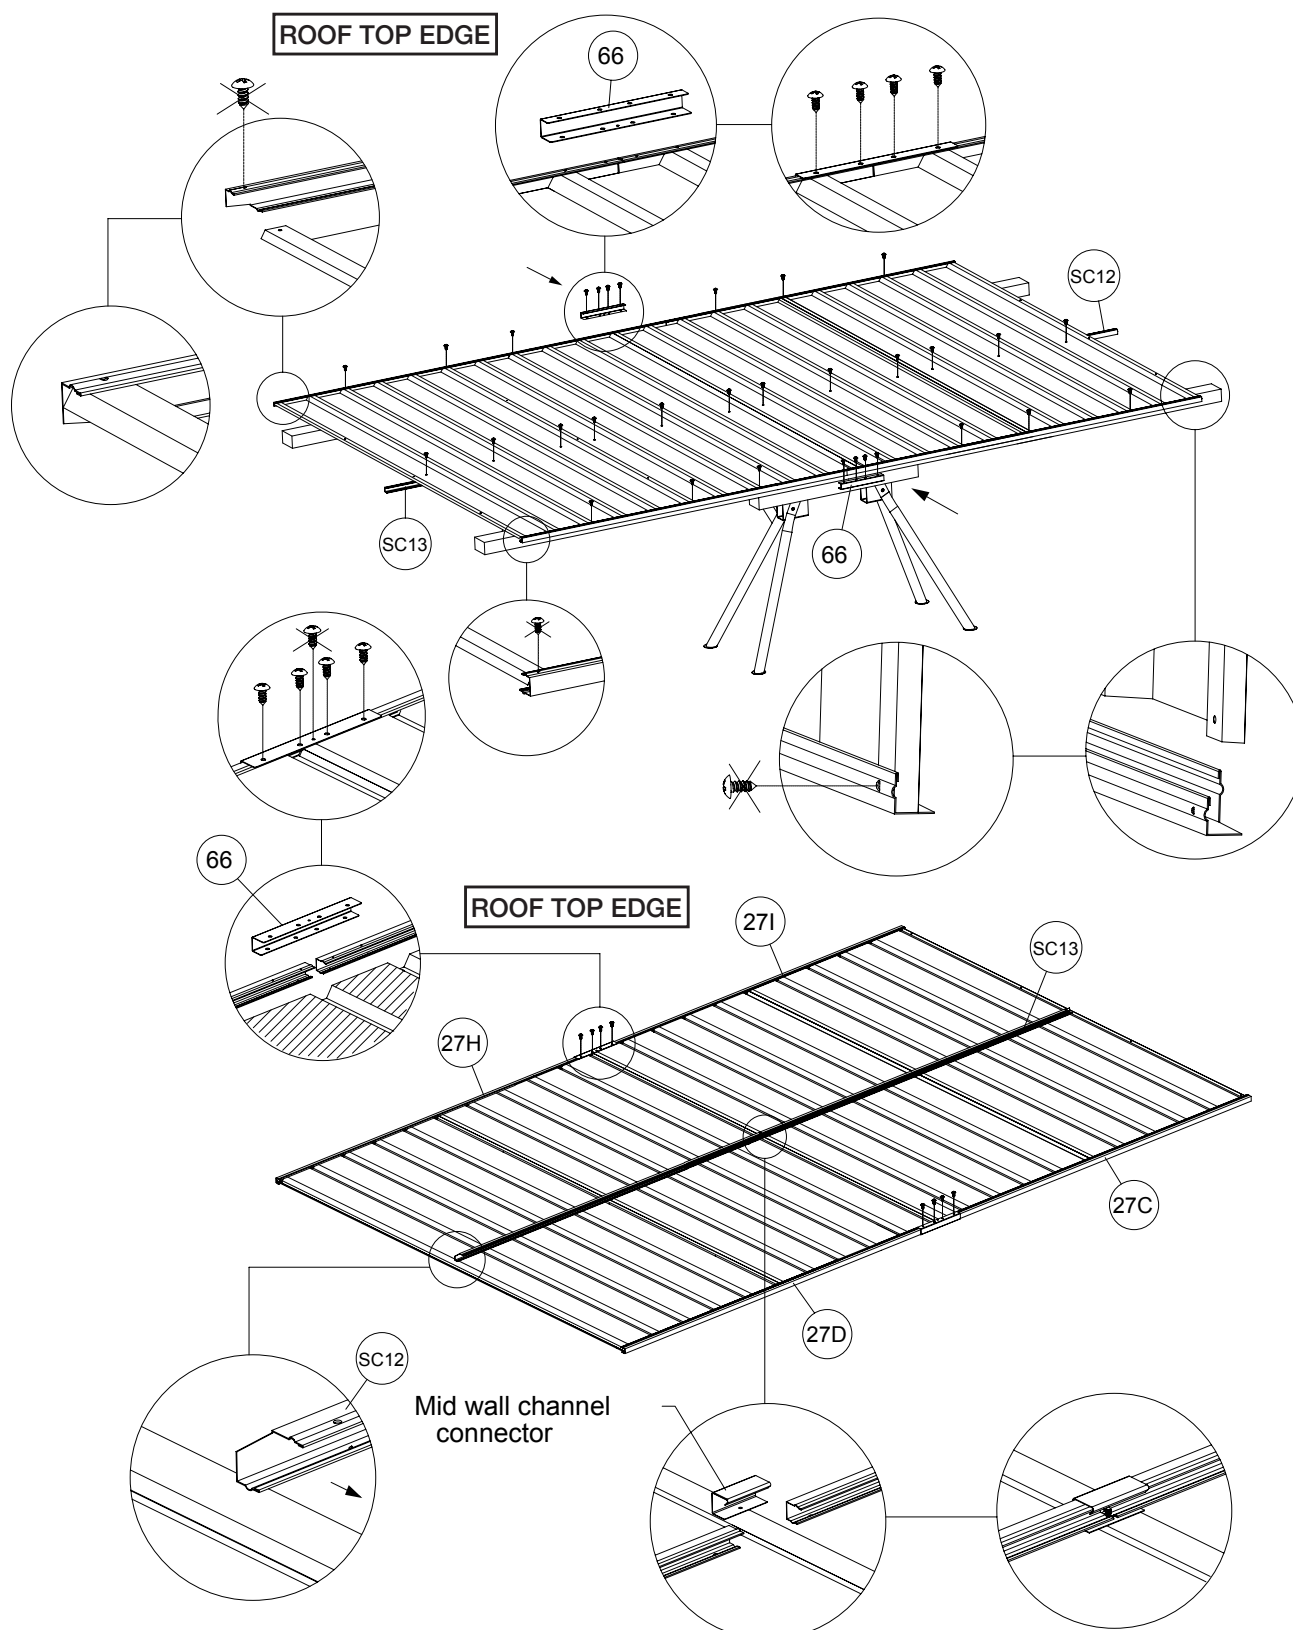

### Step 3: Assemble the side wall panels


Place parts 2D and 7A (sheeting) on your worktable and fix part 25 (top channel) and part 20A (bottom channel) to the sheeting by tapping or sliding the channels in. Make sure the small lip of the channel is always facing out. This ensures rainwater cannot build up inside your shed. Make sure part 25 is used as top side channel. Now fix part SC05 (mid wall channels) to the sheeting with self-tapping screws. **NOTE:** the groove should face downwards. **NOTE:** Screws are applied to both sides of the connectors. All screws marked with a cross should not be fixed at this stage.

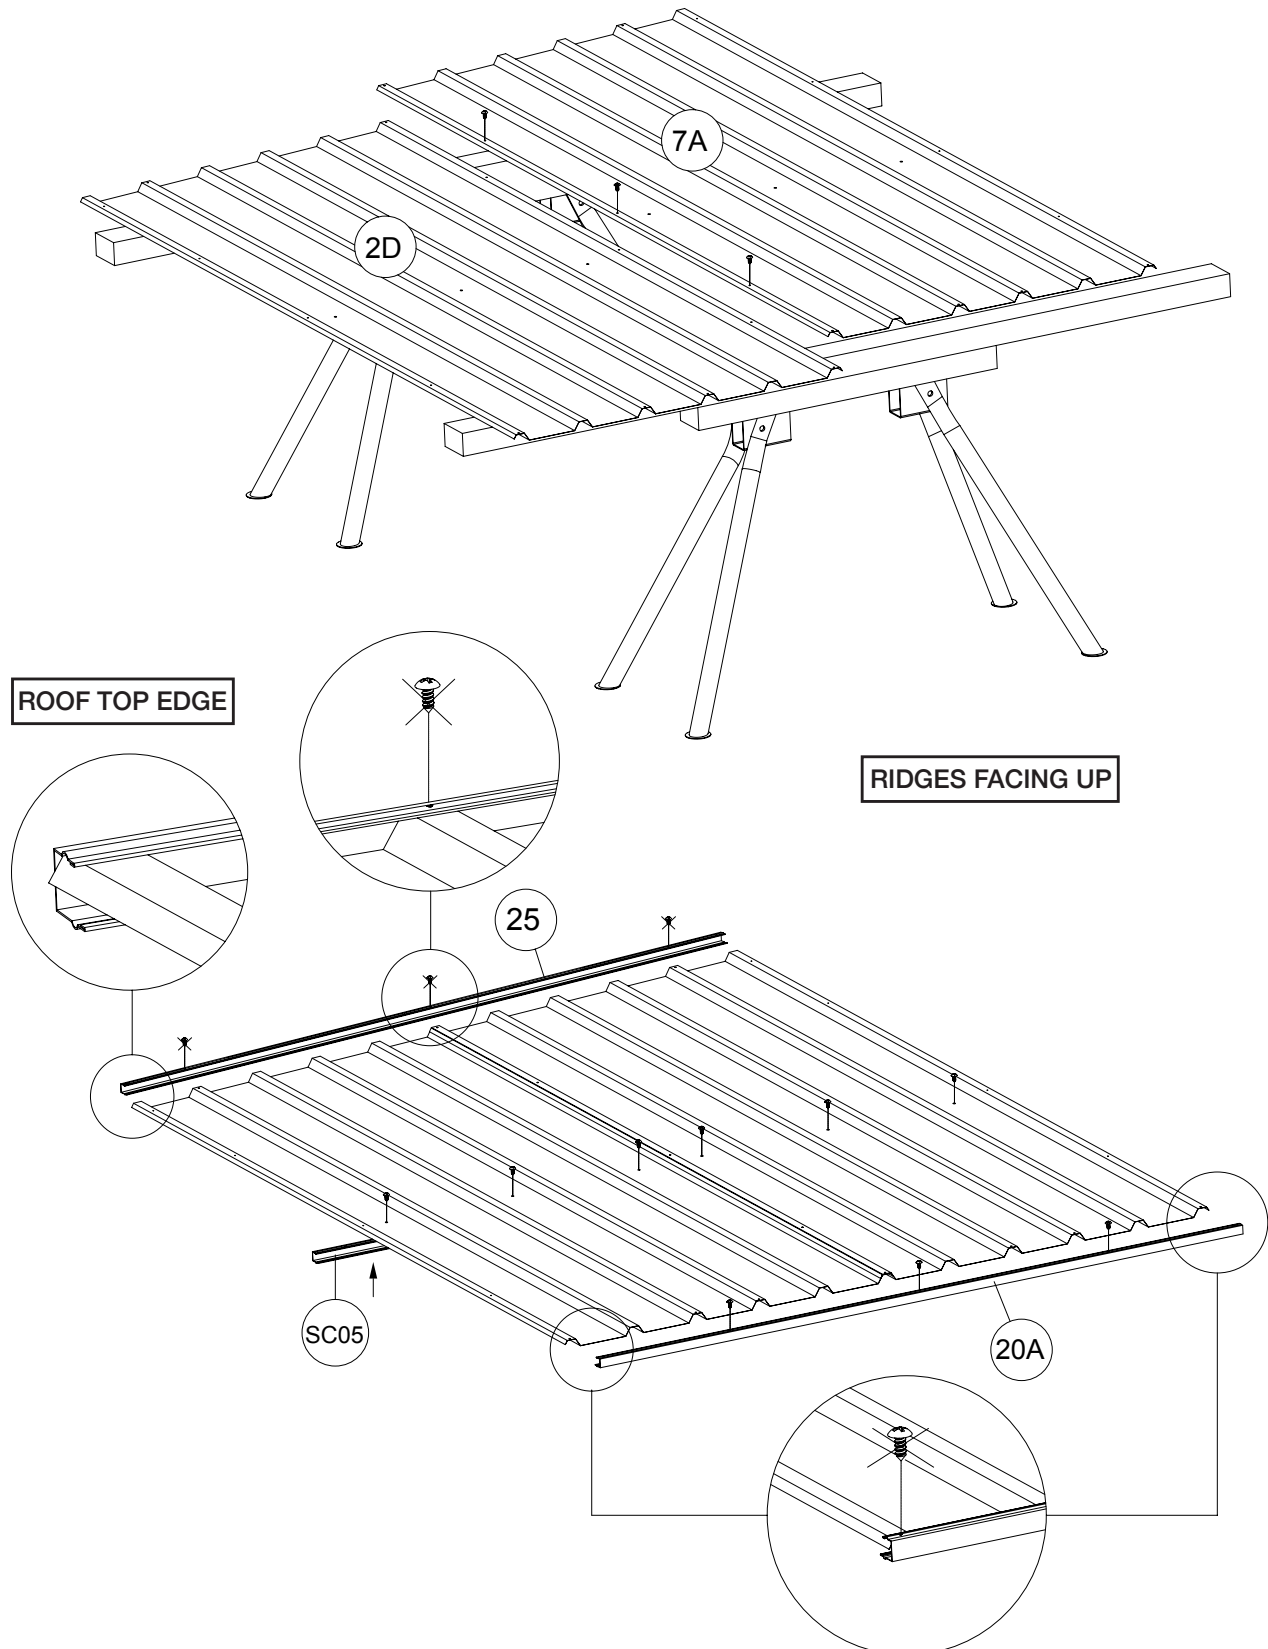

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 3: Assemble the side wall panels (continued)

Repeat same step for the other side wall as per the diagram below.

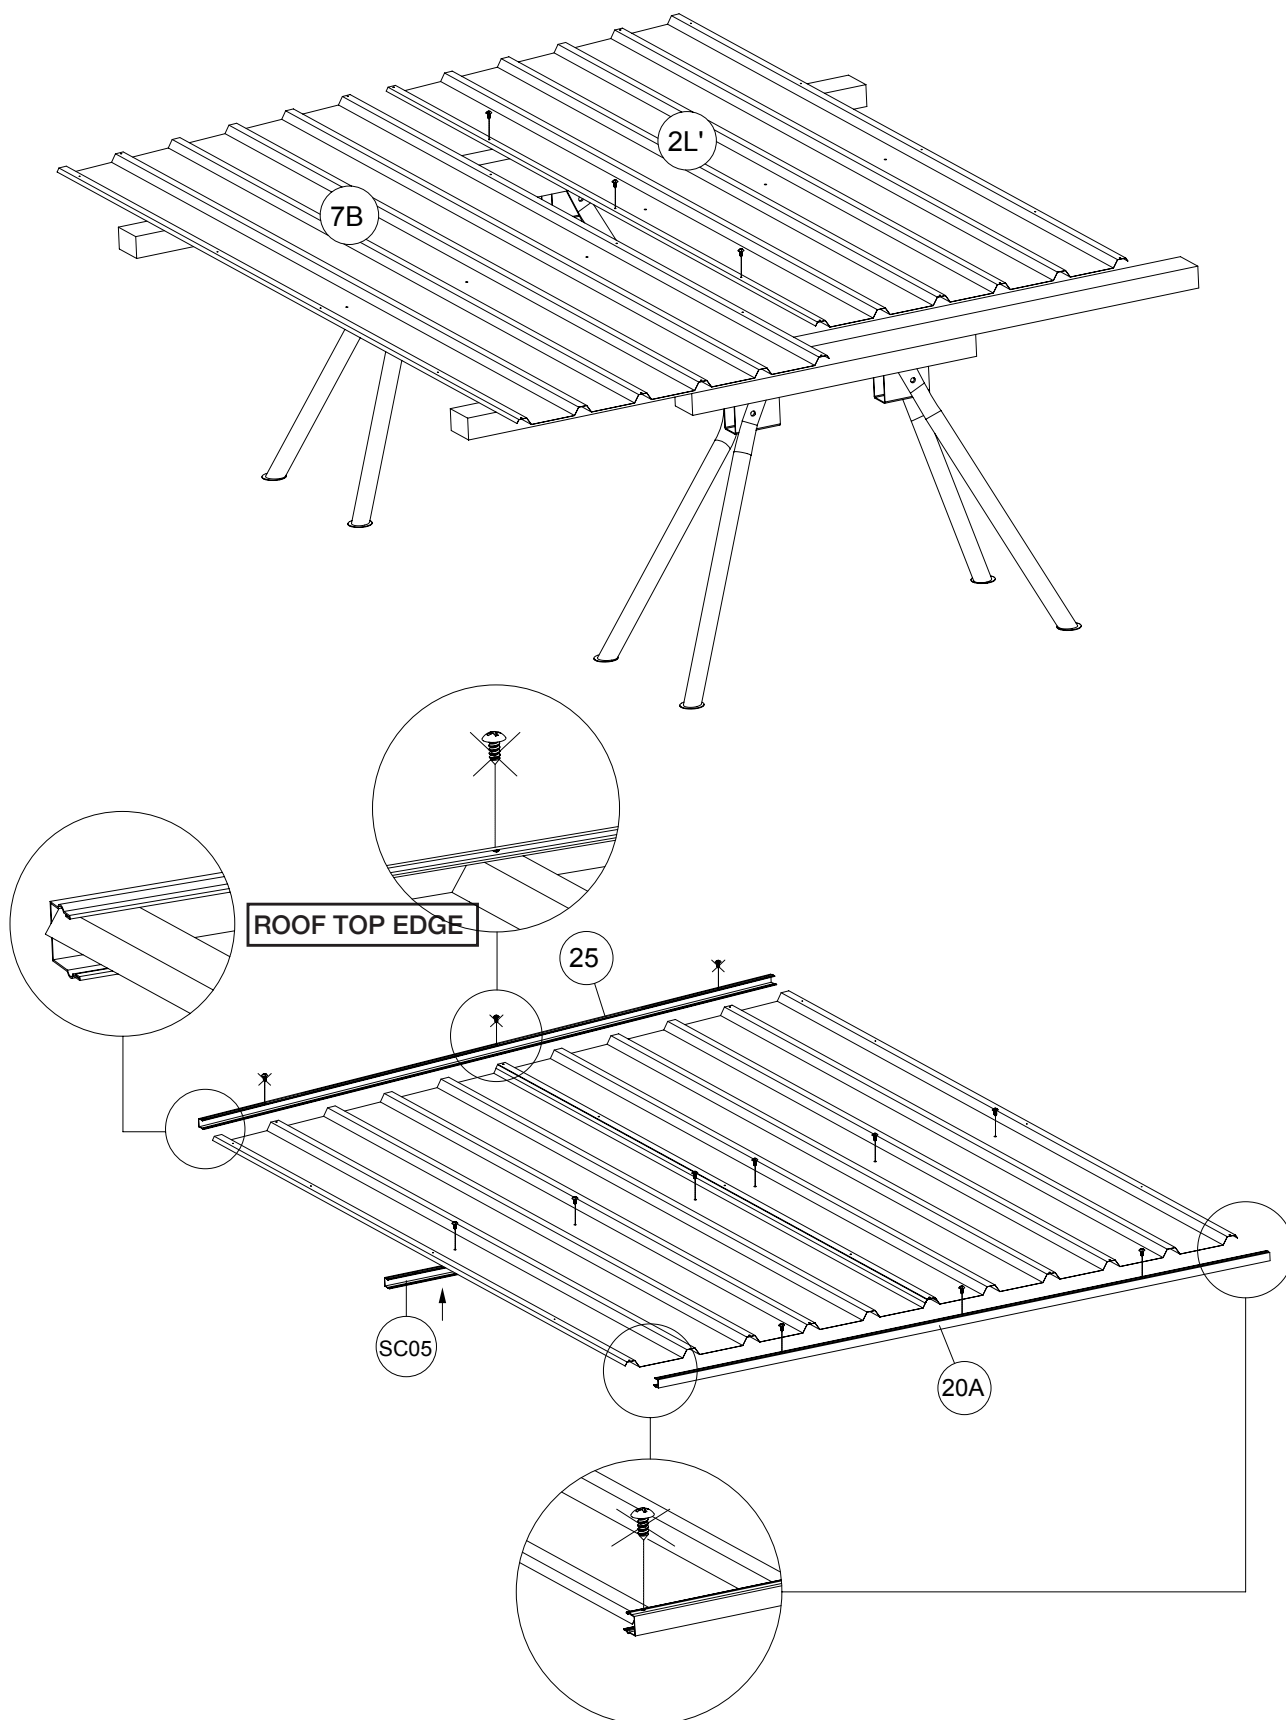


#### Step 4: Assemble the roof panels

Place 4 x part 8 (sheeting) on your worktable and fix 2 x parts 27A and 27B (channel) to the sheeting by tapping or sliding the channels in. Make sure the small lip of the channel is always facing out. This ensures rainwater cannot build up inside your shed.

**Please note:** the groove should face downwards. **TIP** (before applying part 66 connectors): to help panel and screw holes to line up, fasten screws one at a time from one side of the wall to the other and pull panel away from screw each time to match up holes.


**NOTE:** Screws are applied to both sides of the connectors. All screws marked with a cross should not be fixed at this stage.

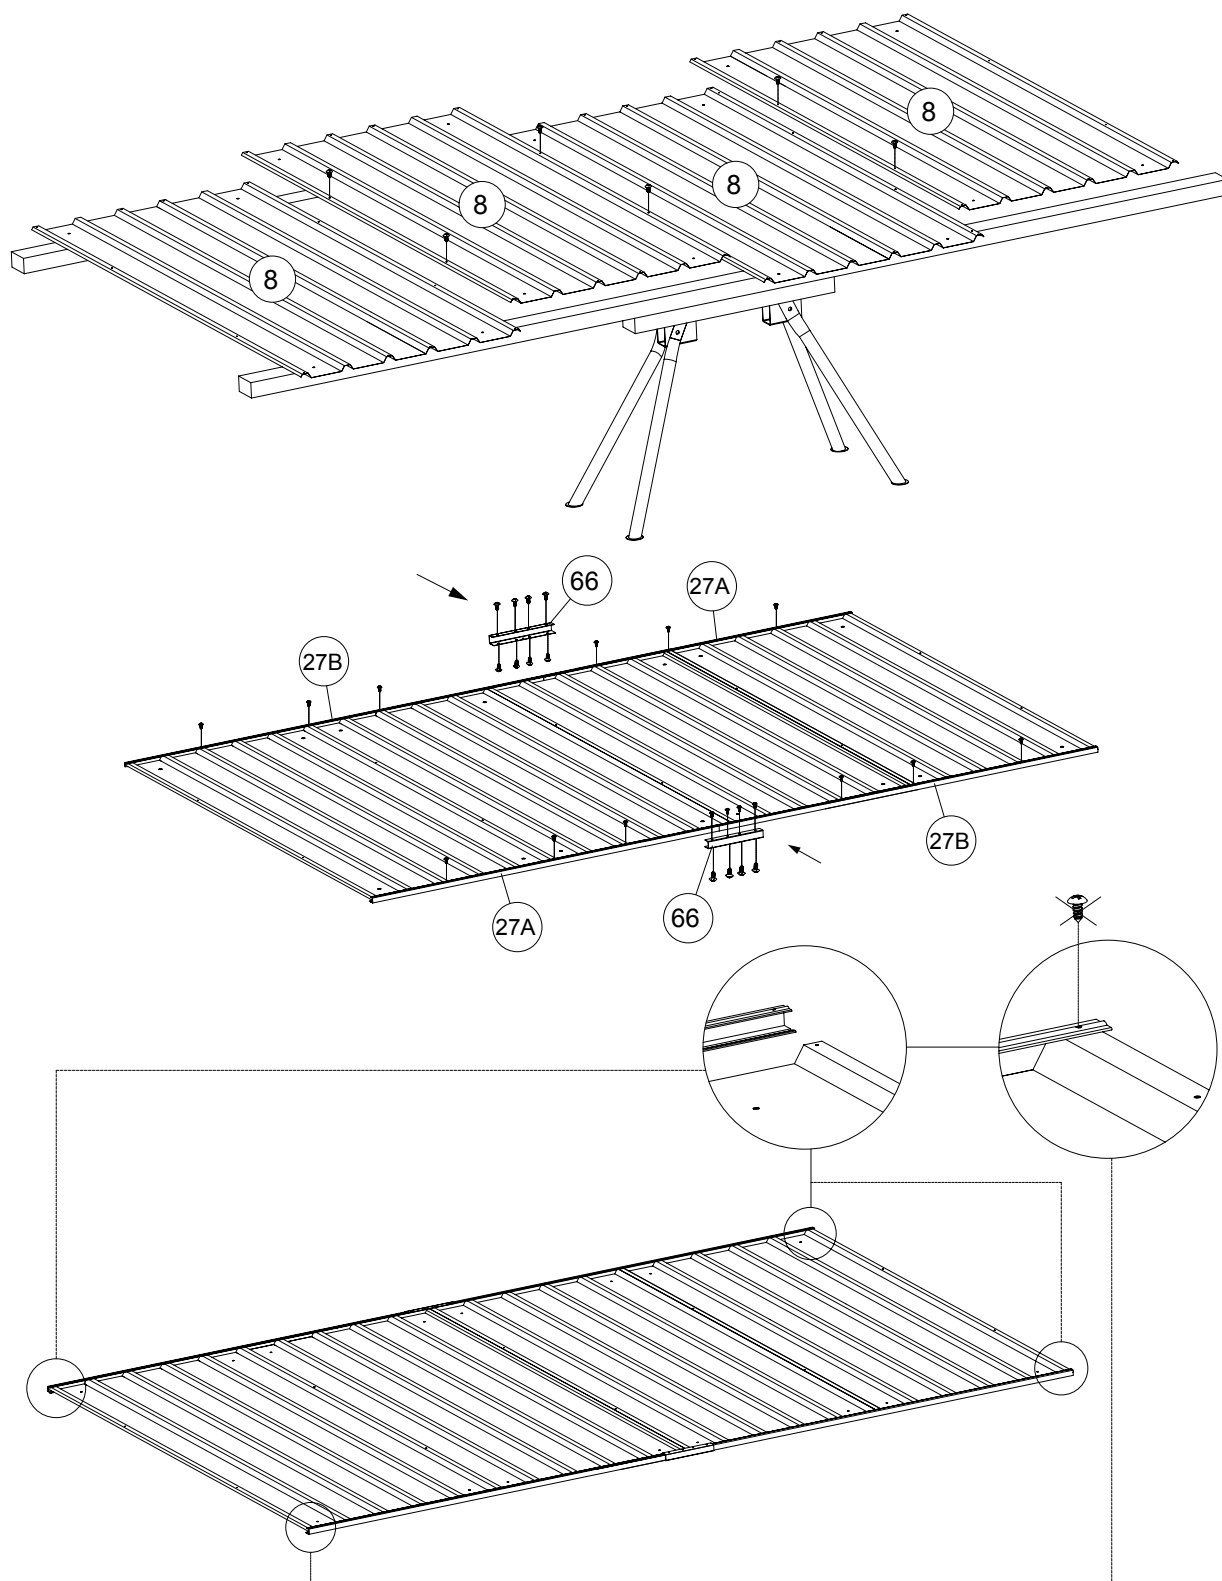

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 5: Assemble the front doors


Place part 5A (door sheet) on the worktable. Fit 2 x part 21P (channel) to the top and bottom of the sheet and parts SC29, SC30 (channels) to the side of the door panel. Fix these channels with the provided 3.0 x 10mm rivets as per the diagrams below.

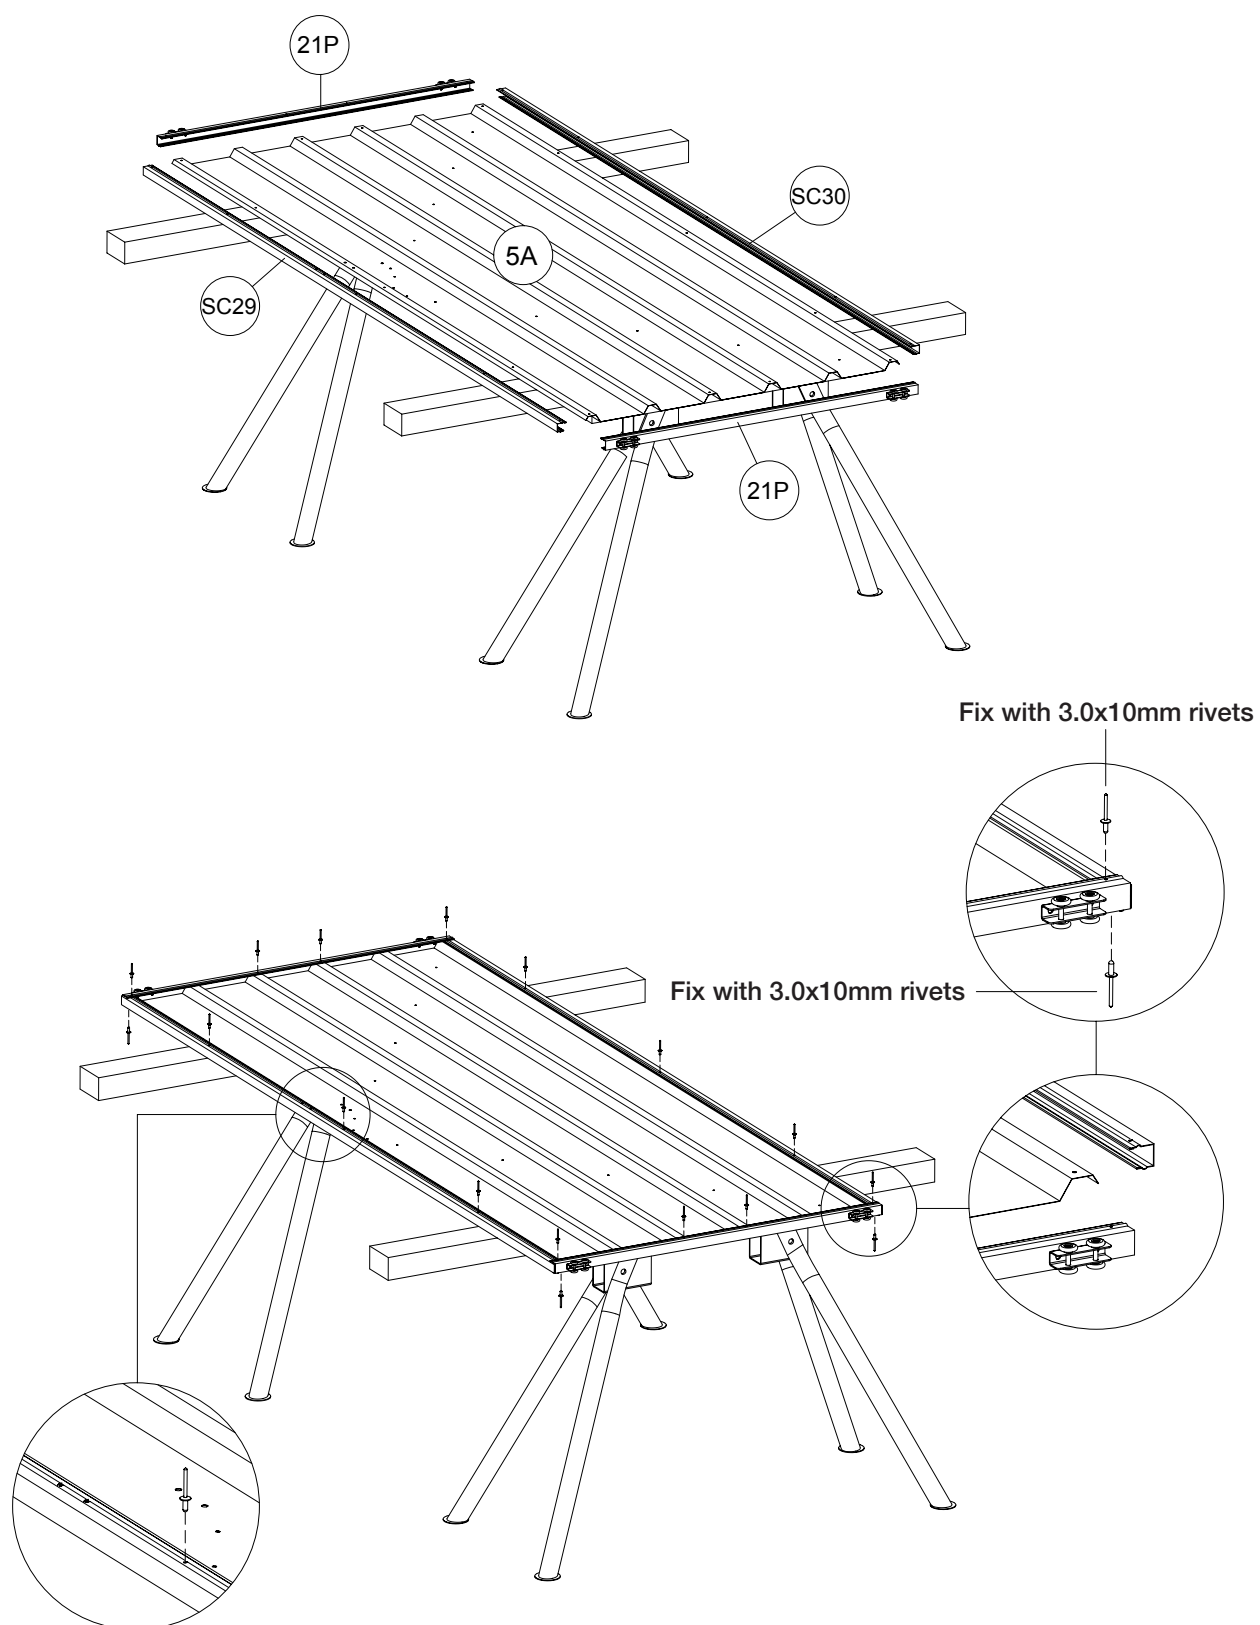



### Step 5: Assemble the front doors (continued)


Now repeat the same step for the other door as per the diagram below.

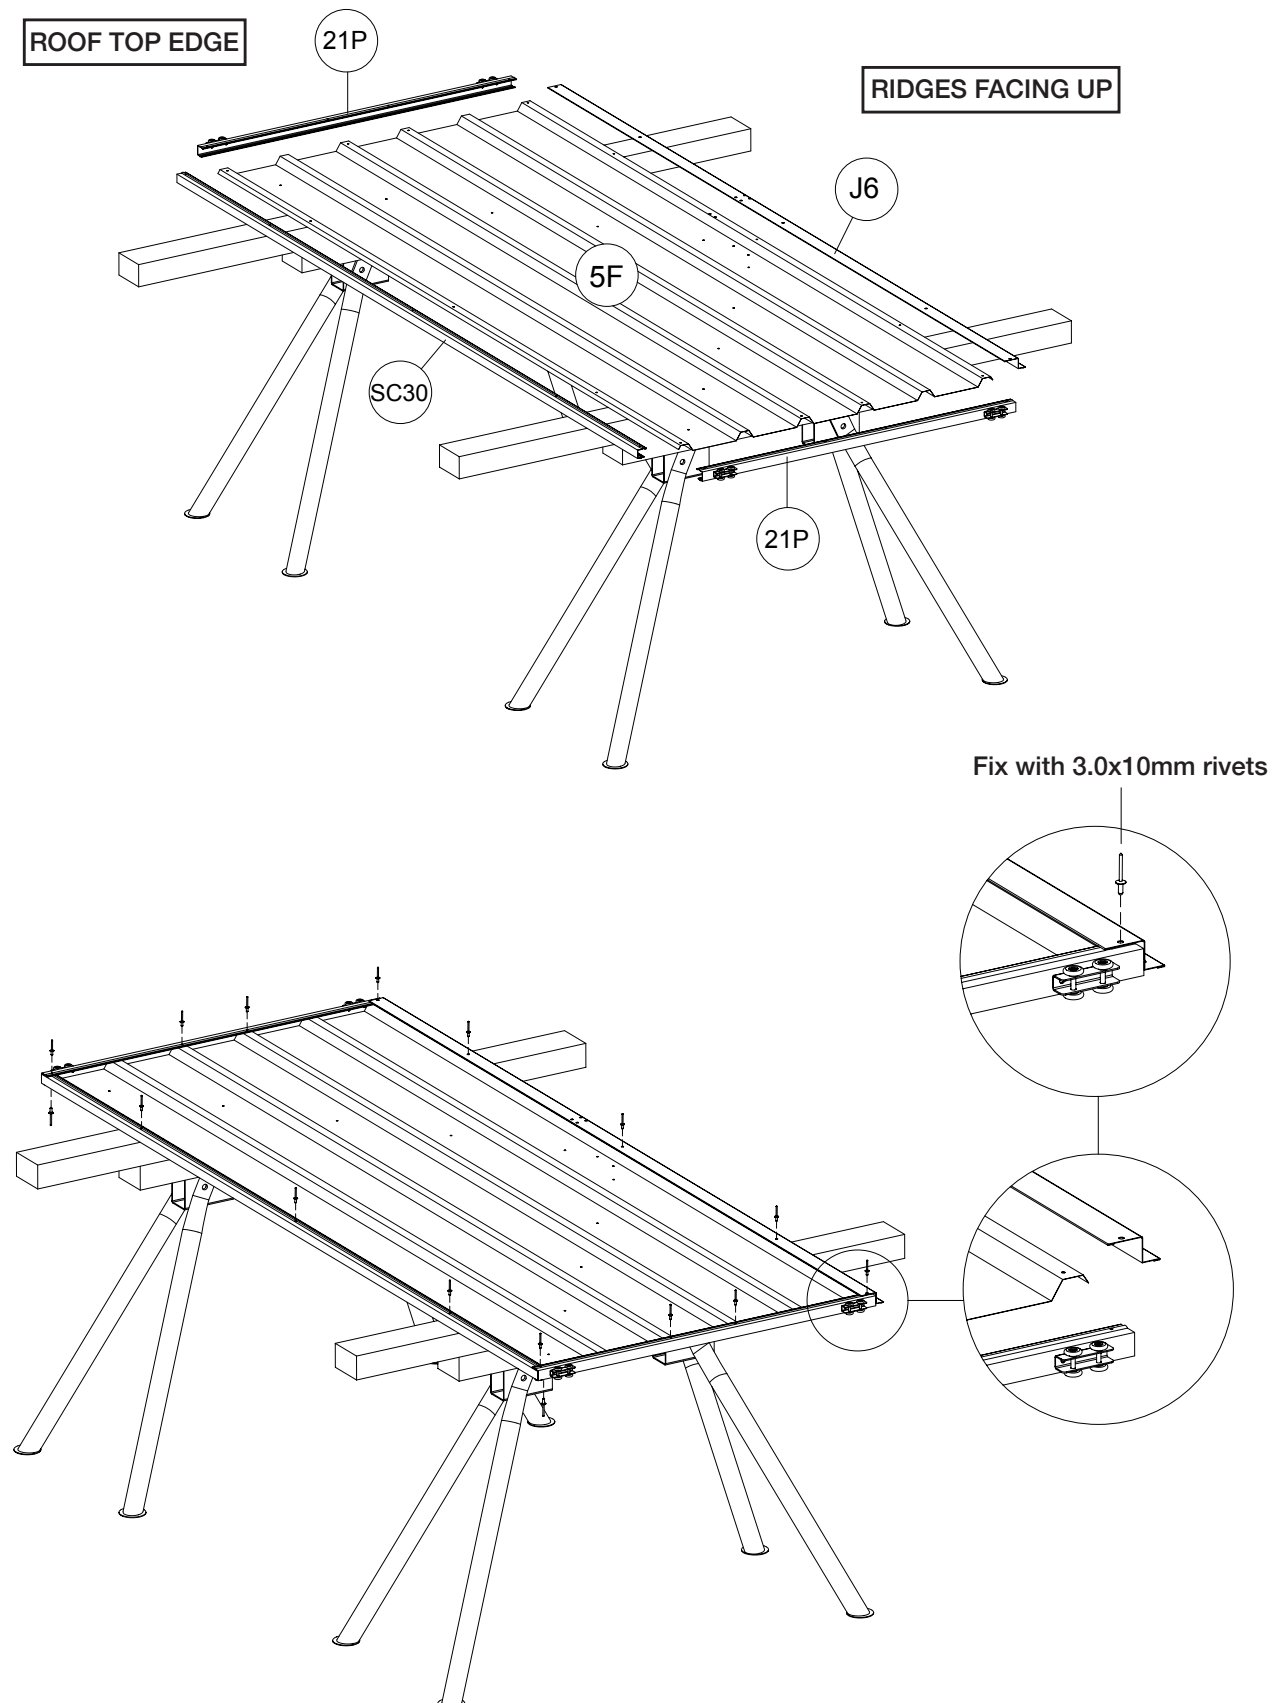

# GardenShed 2.99W x 1.51D x 2.08Hm


## Step 5: Assemble the front doors (continued)

Once channels are fixed to both doors, align 2 x part U4 (brace) and part W (joining brace) with holes on the back of each door and position temporarily with some tape or simply hold in place.

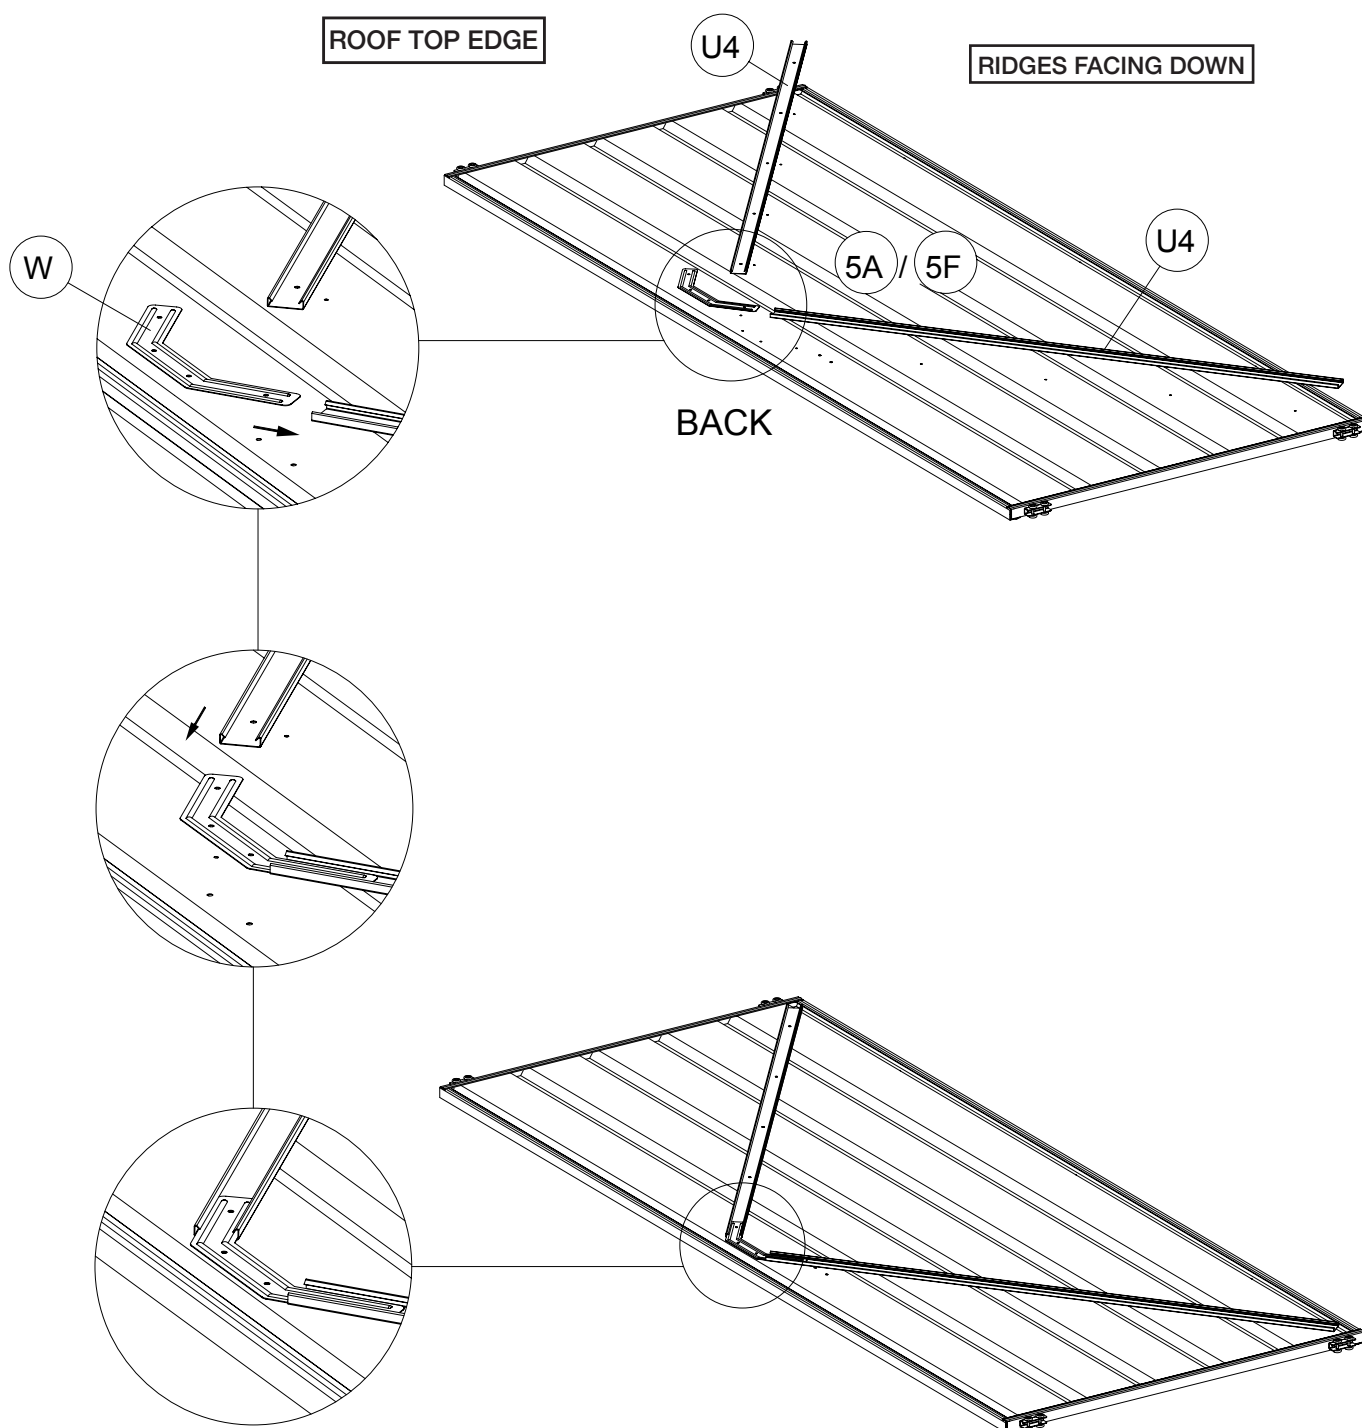

### Step 5: Assemble the front doors (continued)


Turn door over with bracing still aligned with holes (make sure the ridges of the door are facing up) and fix the bracing with 3.0 x 10mm rivets through the front of the panel. Then turn door over and insert plastic stoppers at the ends of braces as shown below.

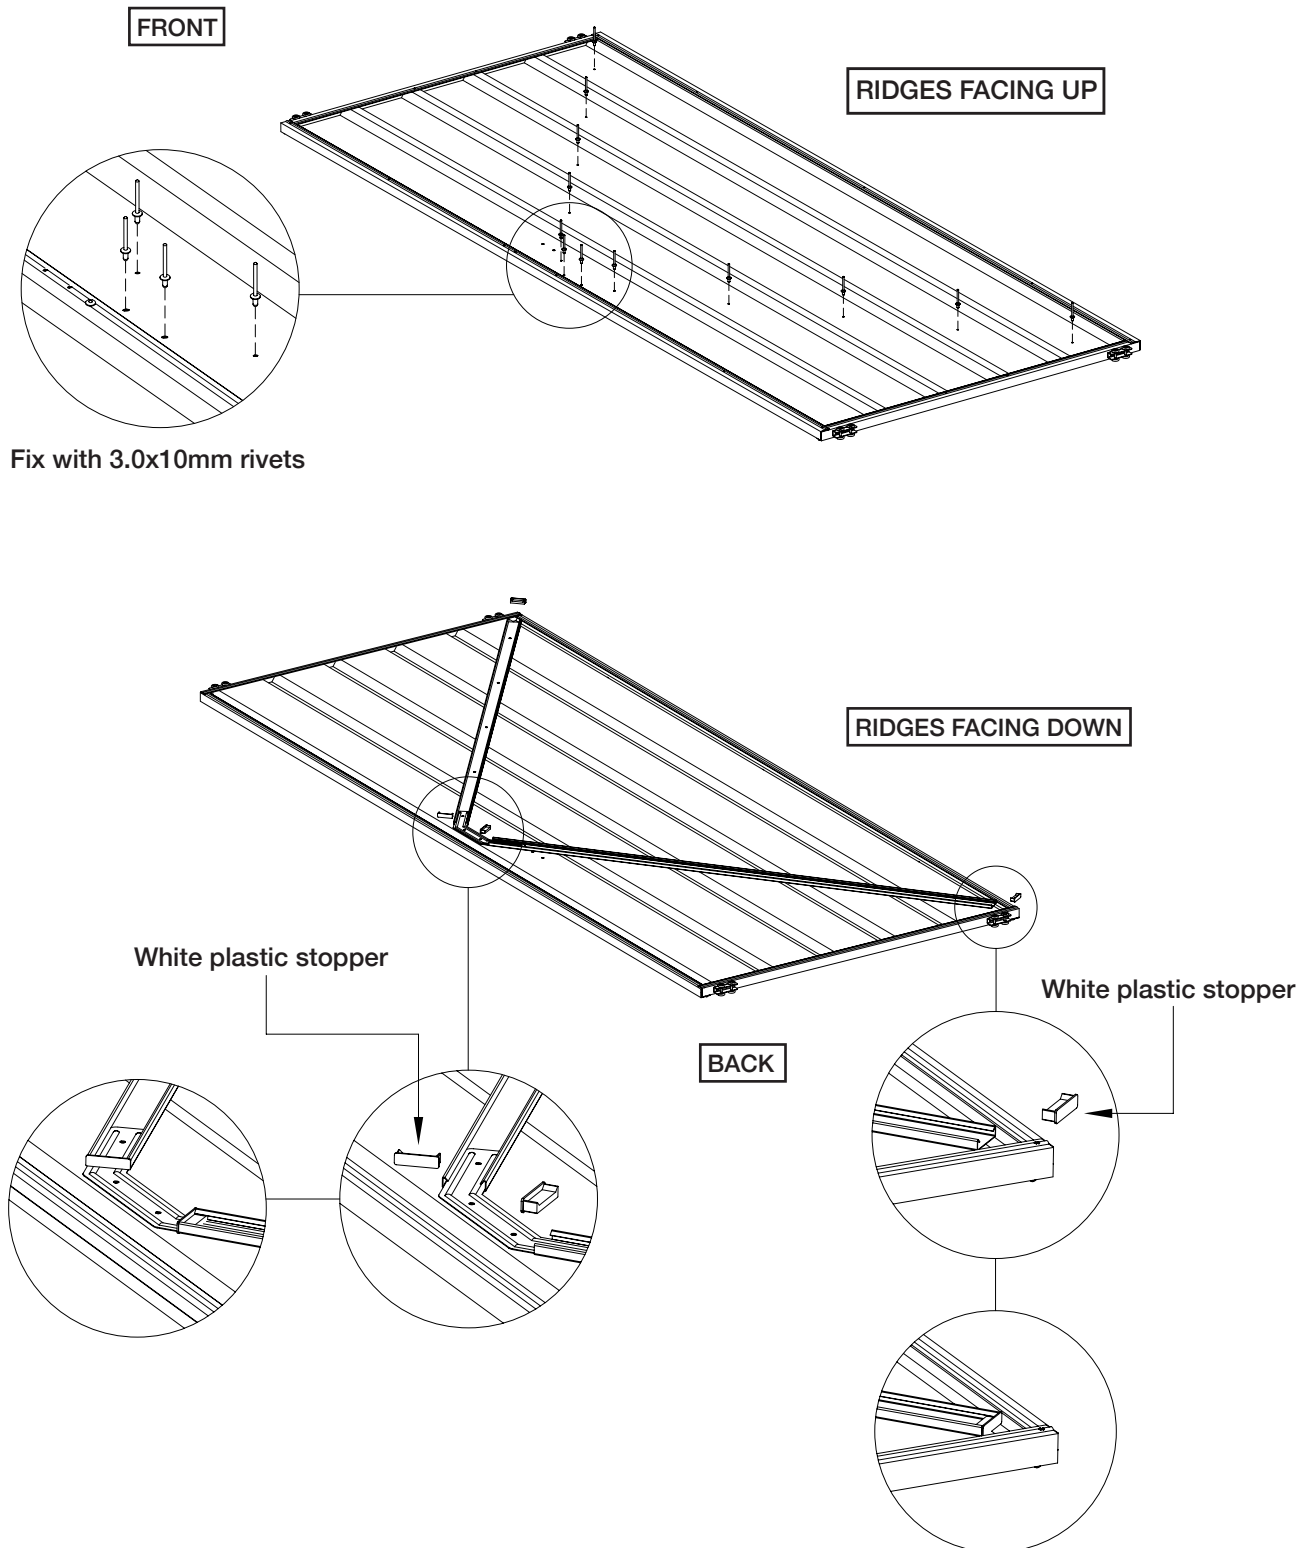

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 6: Assemble the front wall panels


Place 2 x part SS06 (sheet) onto your worktable and fix 2 x part 22E (channel) to the inside edges of the sheeting with self-tapping screws provided as per the diagram below. **NOTE:** All screws marked with a cross should not be fixed at this stage.

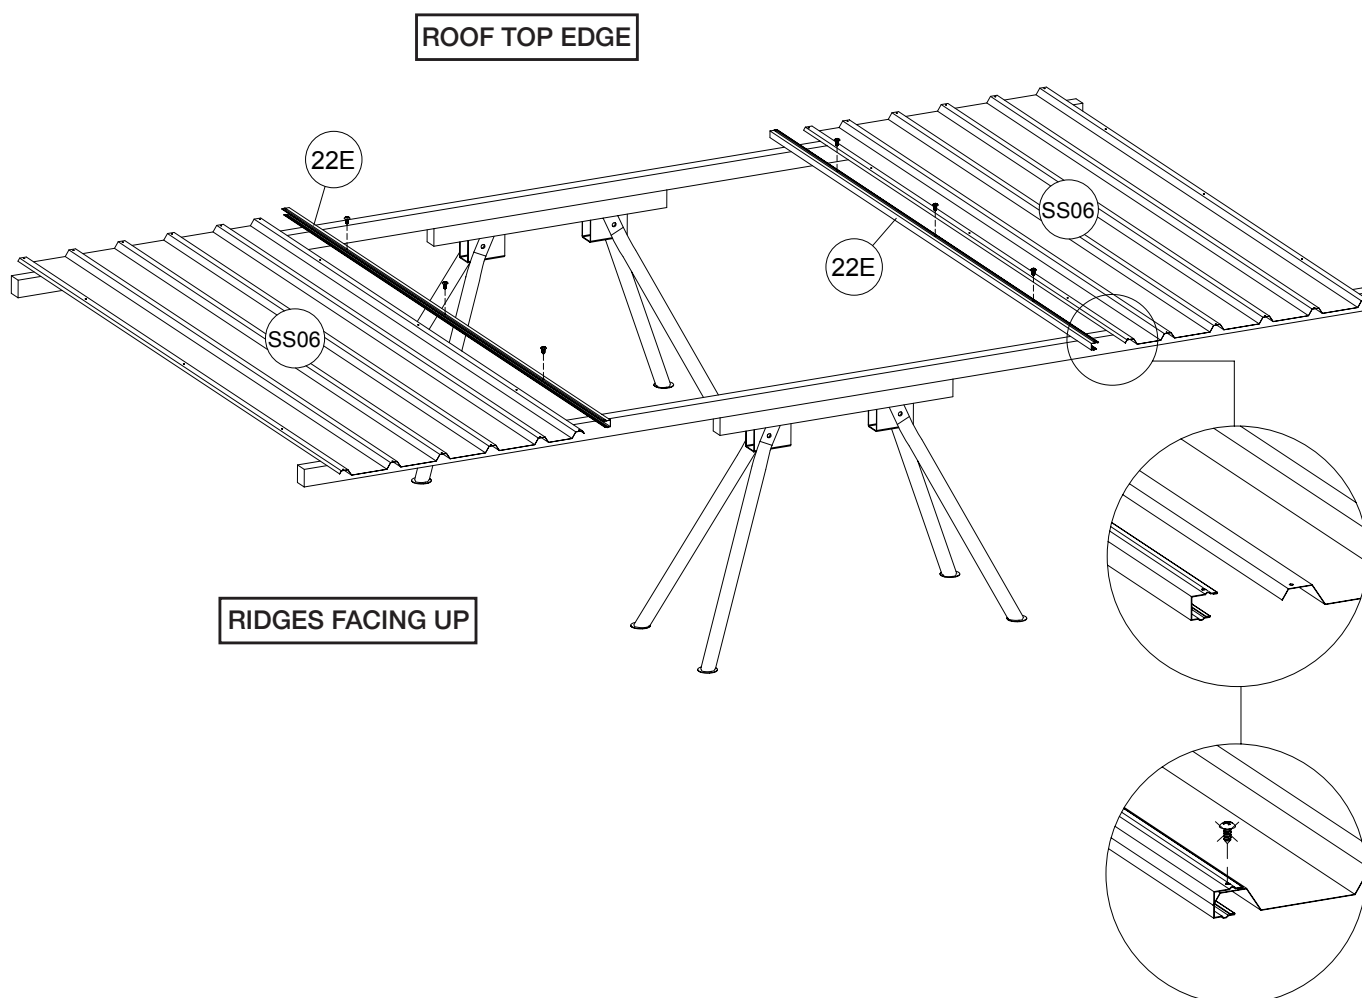

**Step 6:** Assemble the front wall panels (continued)

Fix parts 27R, 27Q, C26 (top channels) and parts 27S, 27T, and C26 (bottom channels) using self-tapping screws.


**NOTE:** for parts 27R, 27Q, 27S and 27T the small lip should be facing out to stop water building up and leaking into shed.

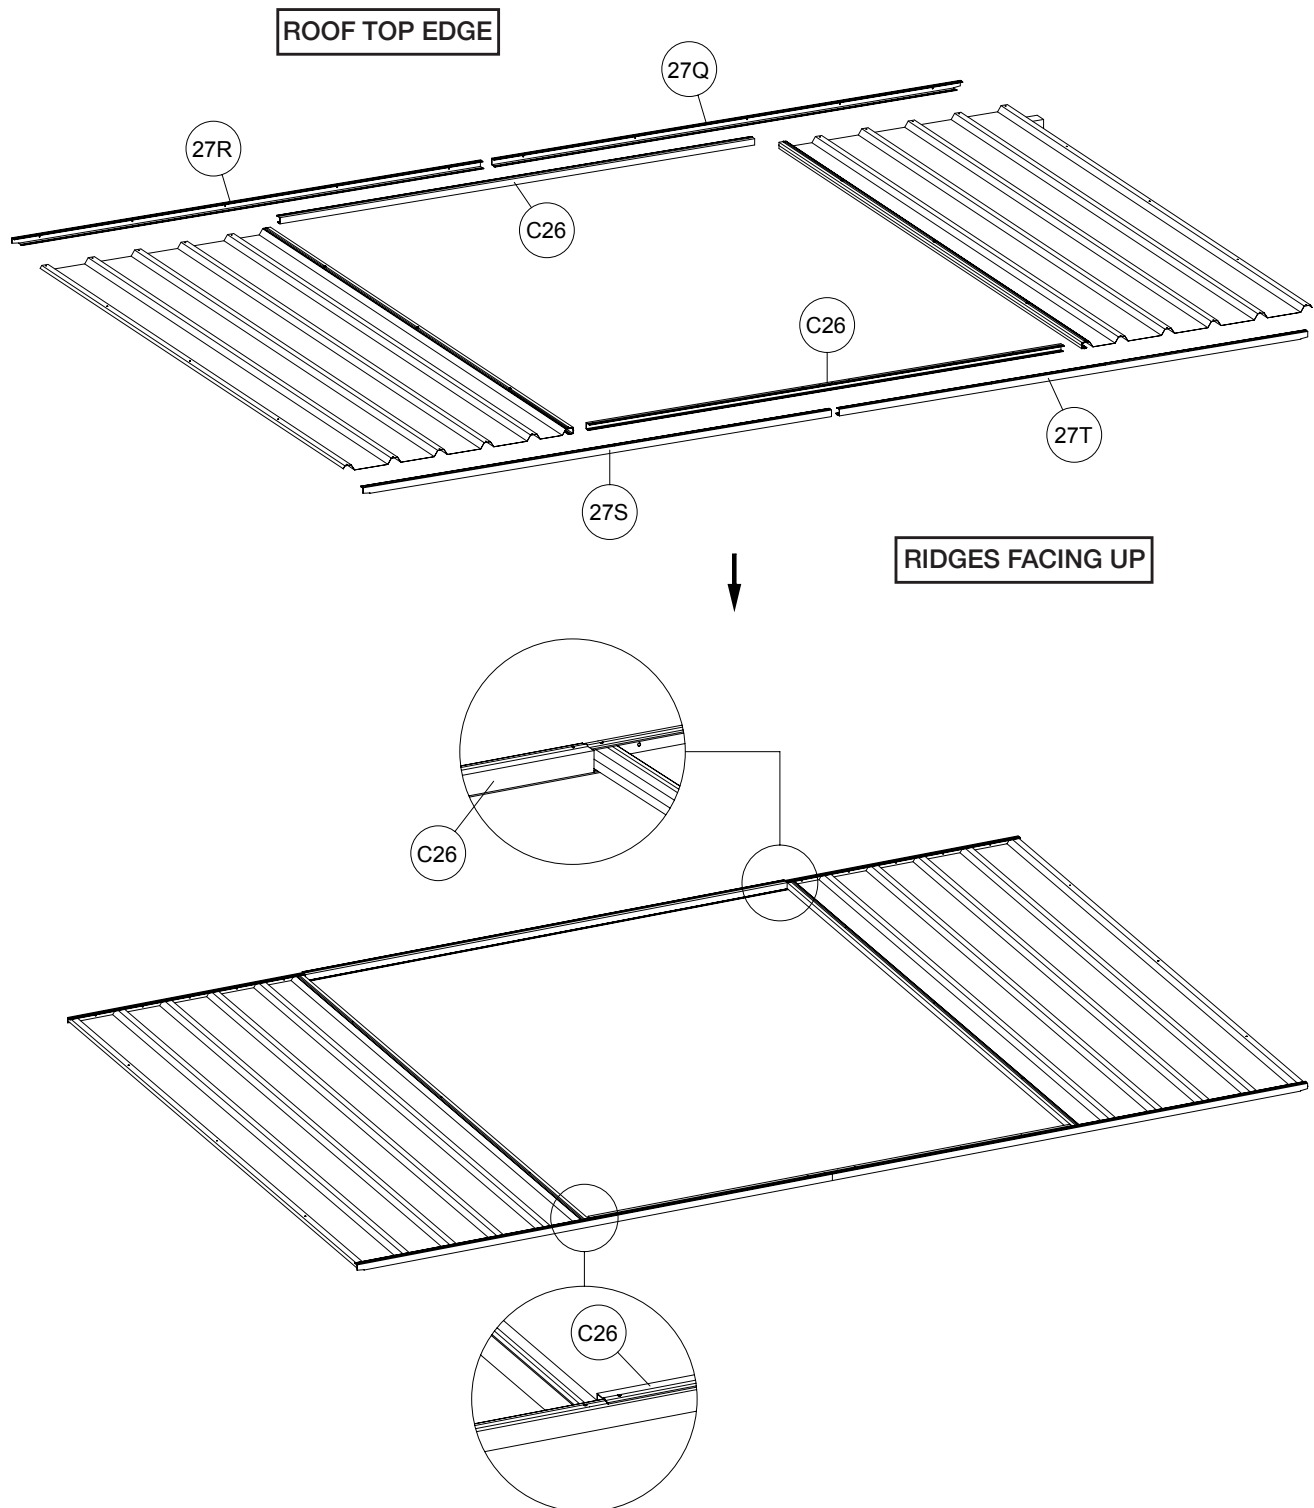

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 6: Assemble the front wall panels (continued)


Once the top and bottom channels are fixed position parts O2, O1 (top track) and O3, O4 (bottom track) and fix with the provided self tapping screws. Attach part 66A (track connector) on the top and bottom tracks to enhance strength. **NOTE:** All screws marked with a cross should not be fixed at this stage.

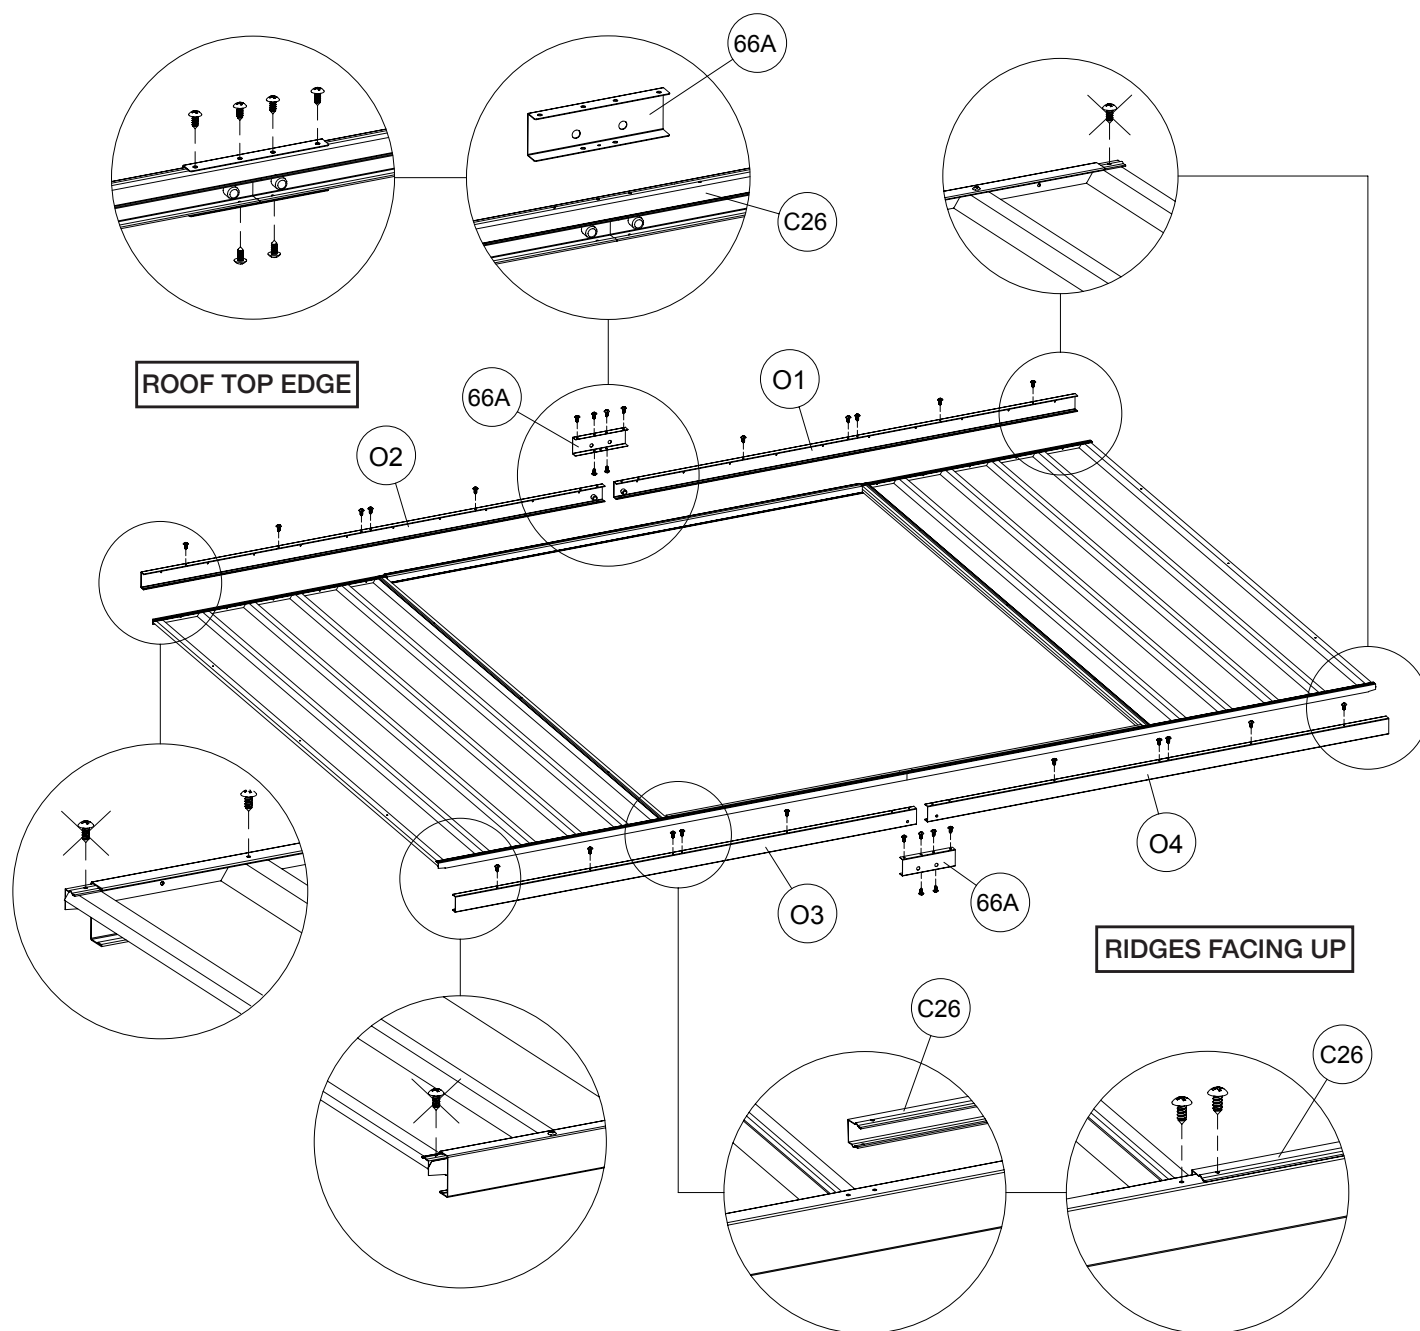

Fix all screws on this page using the provided 16mm self-tapping screws.

### Step 6: Assemble the front wall panels (continued)

Position the doors and ensure the top and bottom channel engage the tracks as you slide them on as per the diagram below. Once doors are sliding freely on the tracks position the doors in a closed position and install parts C4 (hasp & staple) with the provided 4.0 x 10mm rivets.

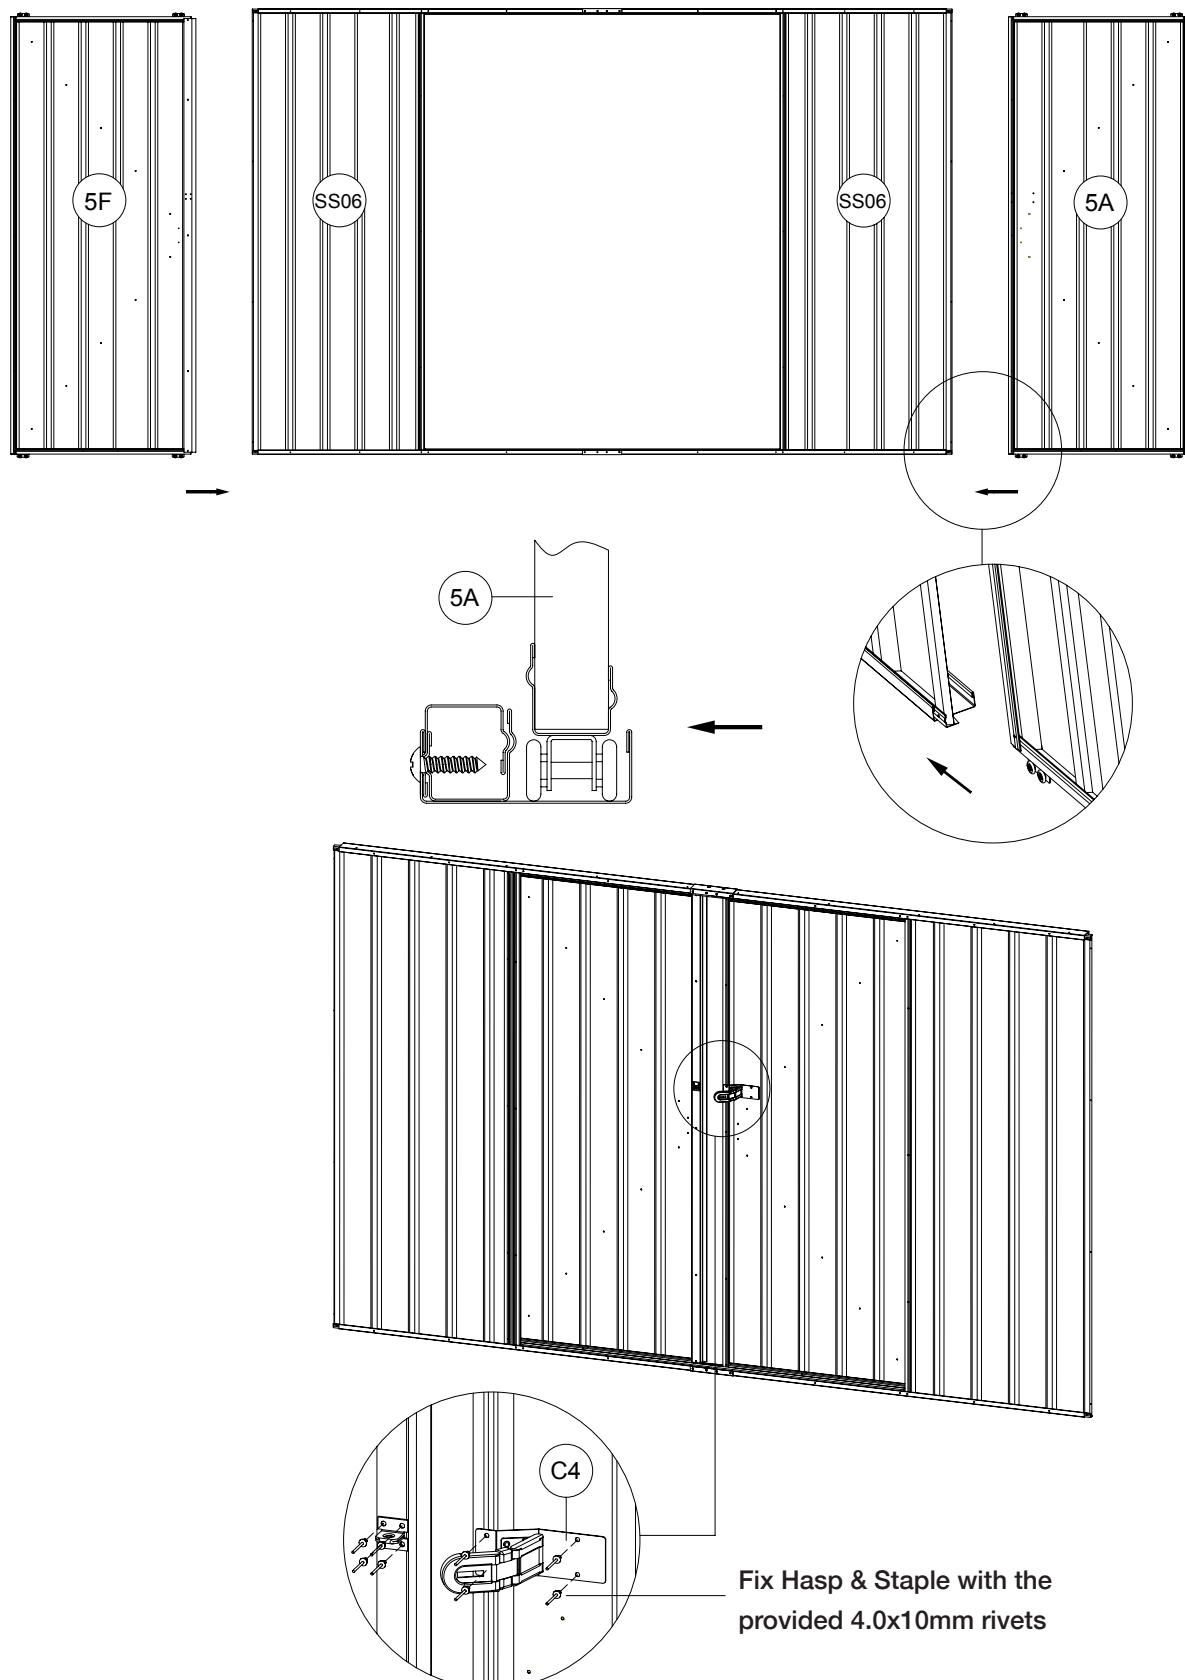


Fix Hasp & Staple with the provided 4.0x10mm rivets

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 7: Fit the panels together


Attach the two side walls to the back wall followed by the front wall. Fix all of these components together using the provided self-tapping screws. When attaching the wall panels together also fix parts Z21, Z22, Z44 and Z19 (jamb) to each corner using the provided self-tapping screws as per diagram below.

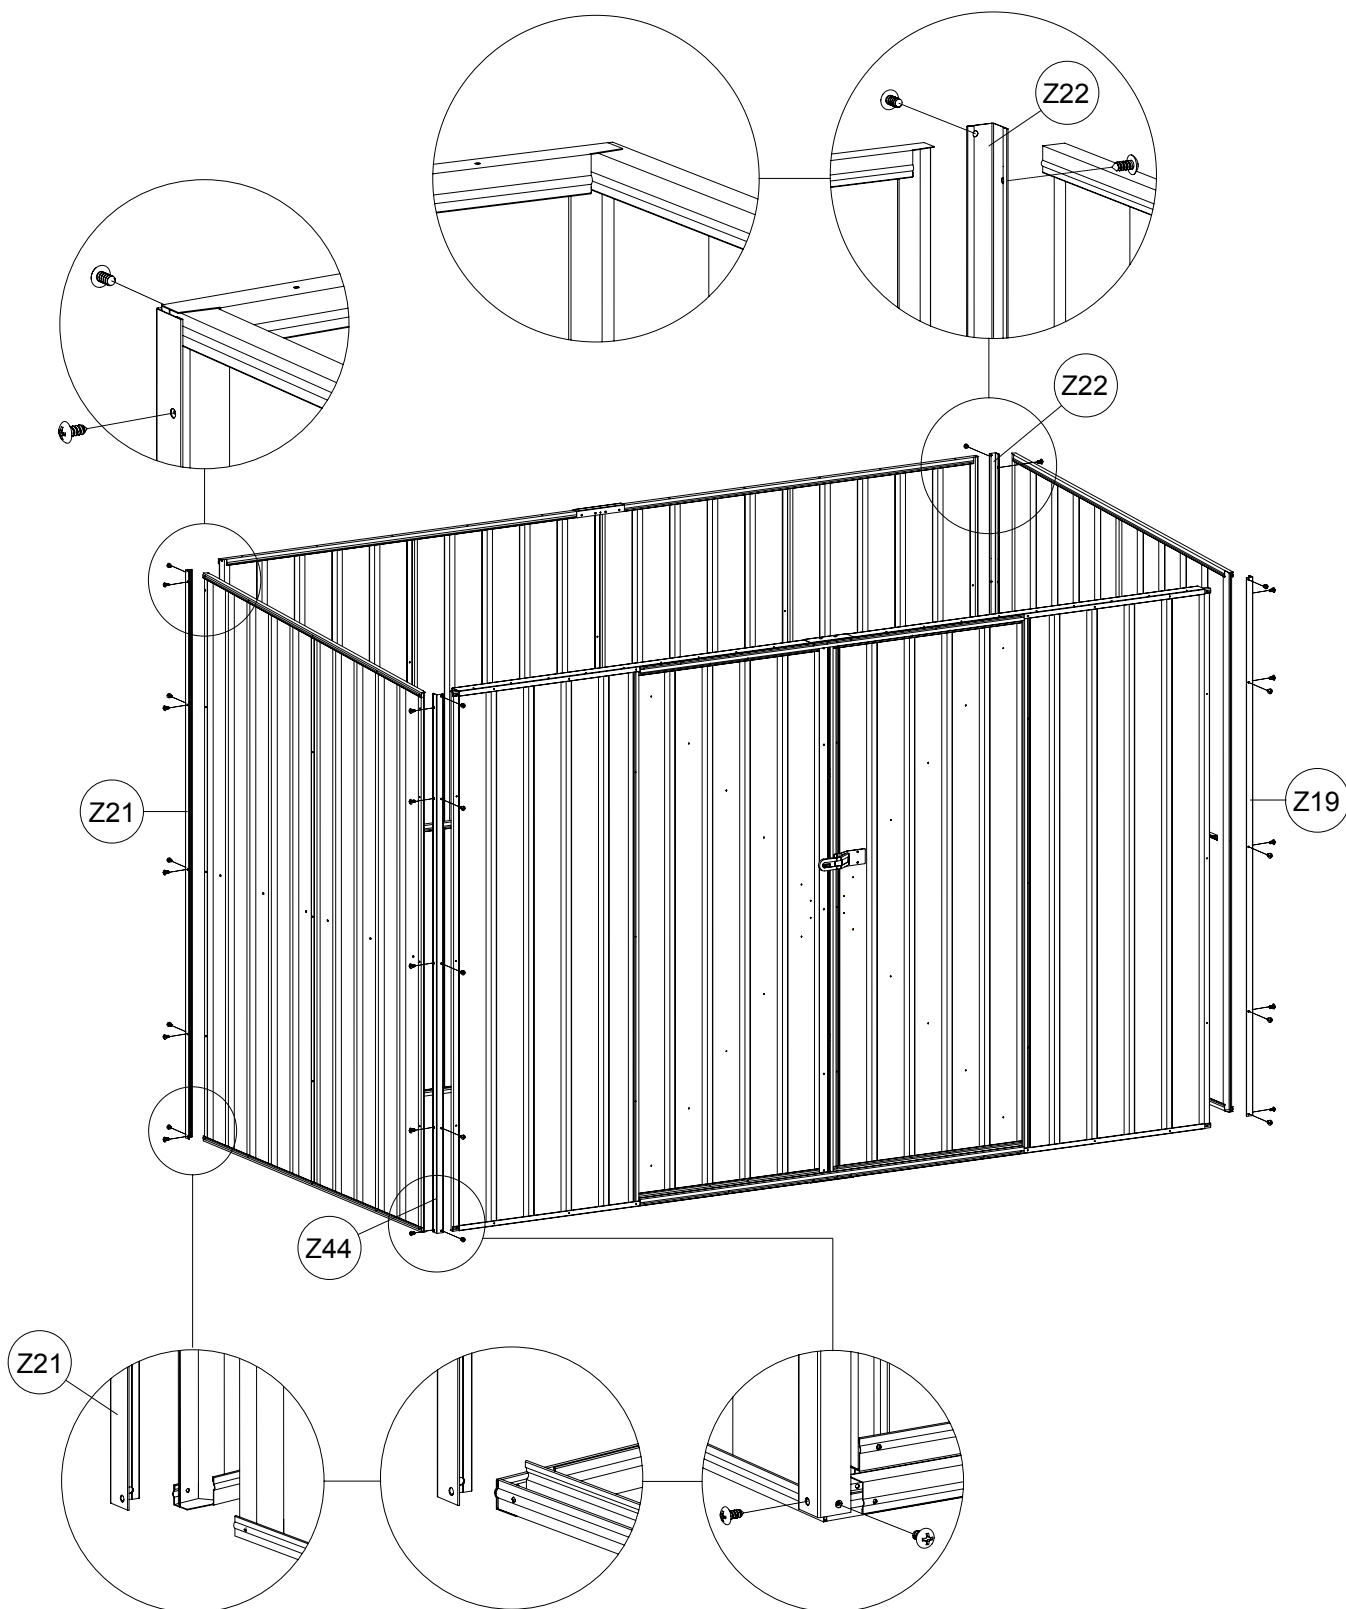



### Step 7: Fit the panels together (continued)


Now that the 4 wall panels are fixed together, position the roof in place and fix with the provided self tapping screws. Before fixing the roof to the side walls ensure 2 x part 51 (lip) are positioned and fixed. Strengthen your mid wall brace by applying part 72 (mid wall brace bracket) to each rear corner. Now fix the bolt down kit as per the below diagram.

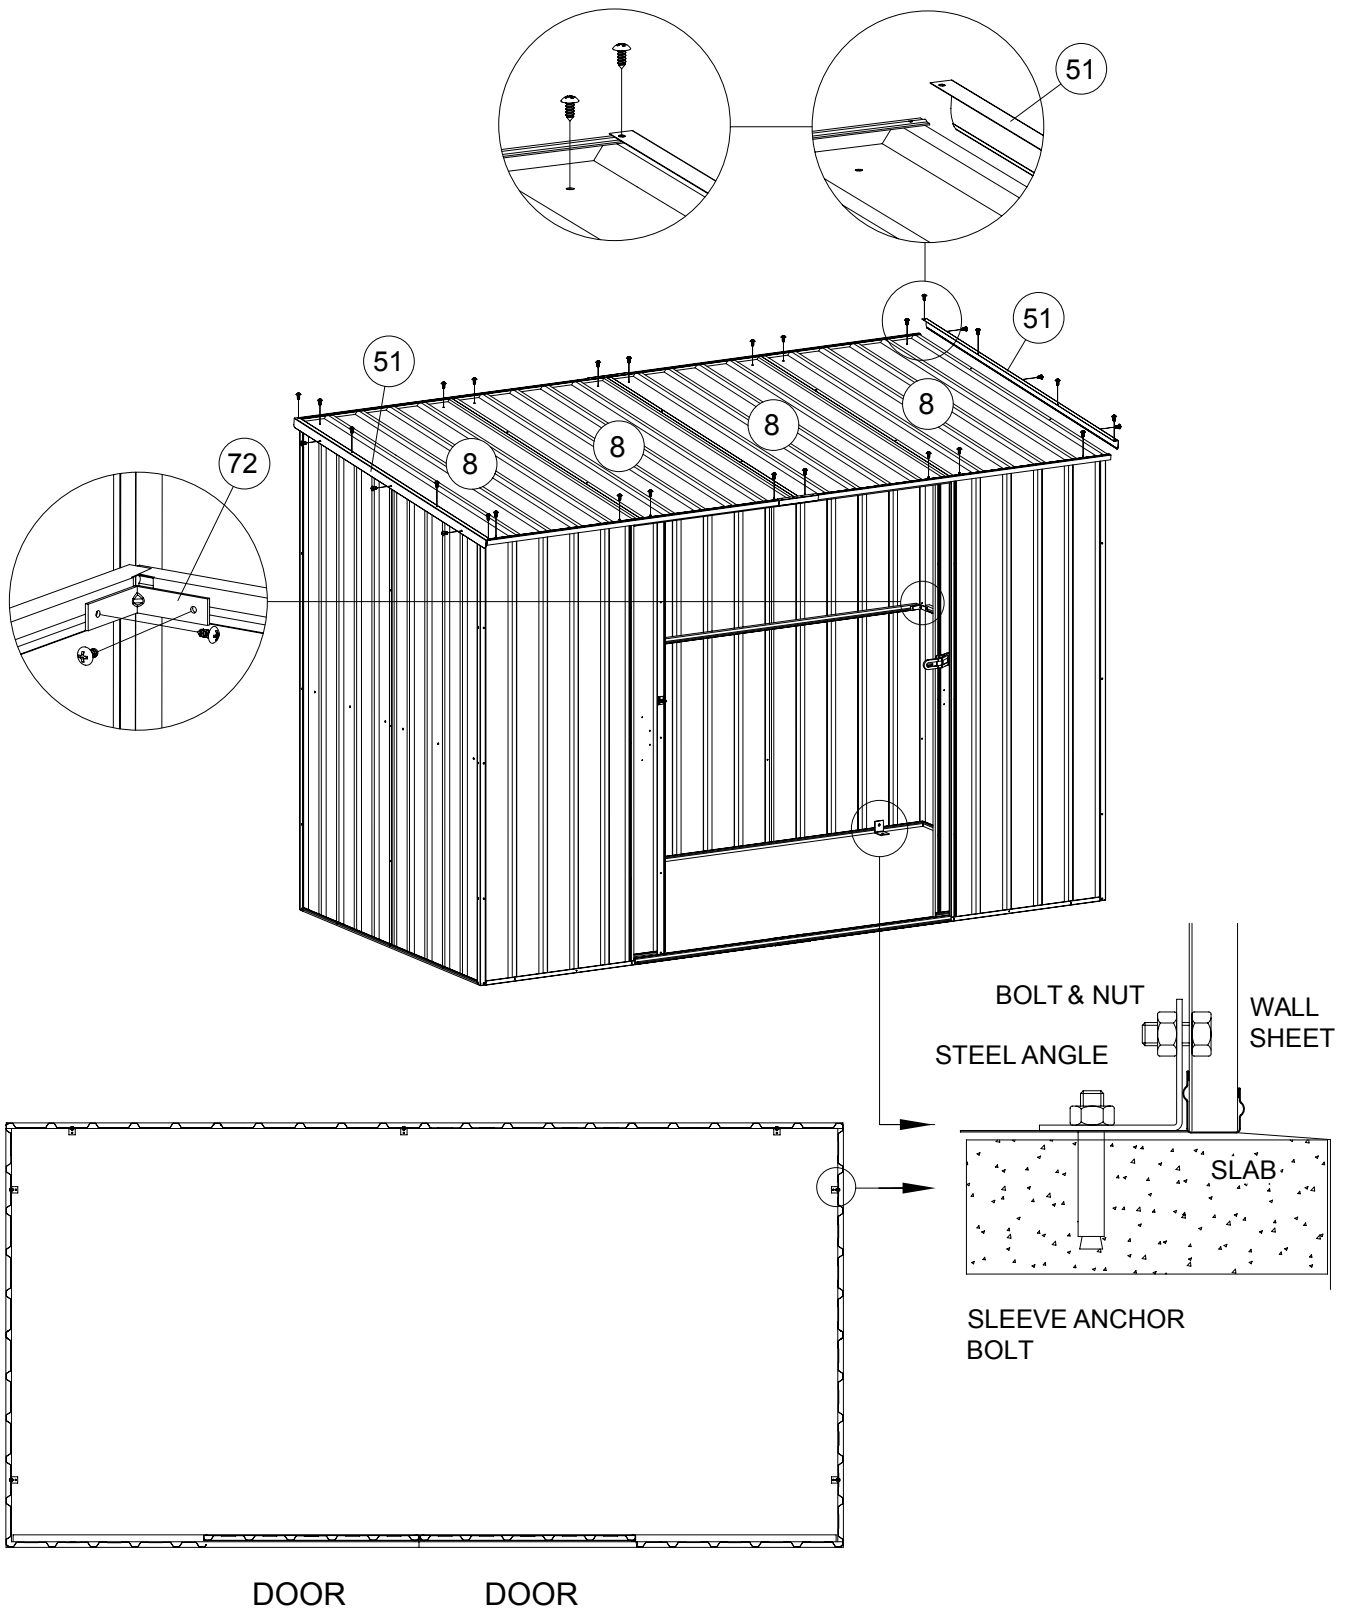

# GardenShed 2.99W x 1.51D x 2.08Hm

## Step 7: Fit the panels together (continued)

Apply the left and right channel safety covers to part SC05 for safety. Also apply the self-tapper covers to the screw ends visible in walls on the inside of the shed.

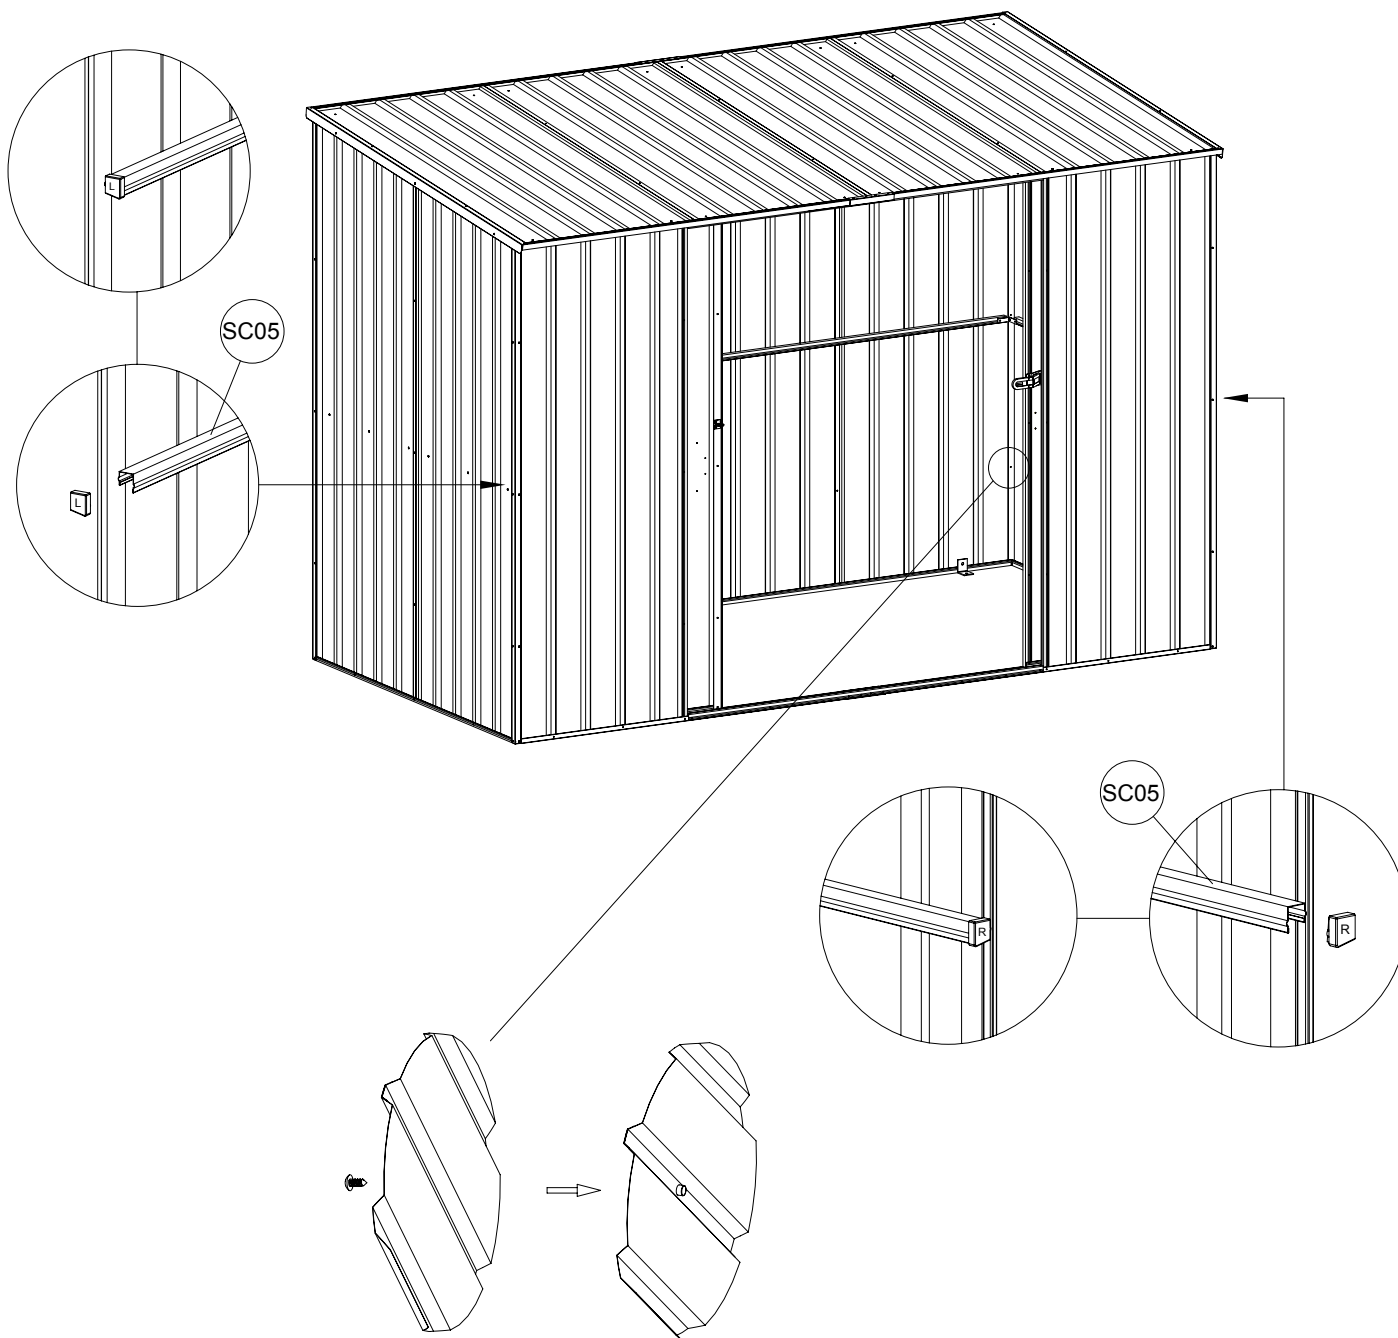

**Warranty statement:**

This warranty against defects is given by:

Pinnacle Hardware  
Business Address: 28 Hudson Court, Keysborough VIC 3173  
Ph: 1800 349 776  
Email: support@pinnacle.net.au

**New Zealand customers please contact:**

HARCO (Harkness & Young Ltd)  
Ph: 09 276 4071  
Email: sales@harknessyoung.co.nz

**Details of Manufacturer's Warranty**

This product comes with a 25 year limited structural warranty ("the Warranty Period") from the date of purchase. This warranty also applies where there are missing or damaged parts identified in the parts list referred to in the instruction kit within the product packaging.

Please ensure that you keep this warranty form in a safe place along with your proof of purchase.

Product: .....

Place of purchase & Postcode: .....

Date of Purchase: ..... / ..... / .....

The benefits of this warranty are in addition to your rights under the Australian Consumer Law (ACL) or Consumer Guarantees Act 1993 (NZ) and in particular, the guarantees implied under the ACL or Consumer Guarantees Act 1993 (NZ) and any other rights and remedies of the consumer under a similar law in relation to the goods and services to which this warranty relates.

**Process of claiming Warranty:**

To make a claim under the Warranty within the Warranty Period, you will need to contact the manufacturer directly by phone or email:

Claims Department contact number: 1800 349 776  
Claims Department email: support@pinnacle.net.au

You will be required to produce proof of purchase (this is at discretion of the manufacturer) at the time of the claim.

The manufacturer bears the cost of replacing the products or spare parts or repairing the products and reasonable direct expenses of claiming under this warranty:

- Where parts are replaced, the manufacturer will bear the cost of sending the spare part and will endeavour to deliver it to the customer's nearest reseller within 10 working days for the customer to pick up. At such time the customer may be required to return the alleged faulty parts.
- Where assessment is required in case of replacing or repairing the product, the manufacturer will appoint an assessor within 10 working days to identify the alleged defect. The manufacturer will bear the repair costs by appointing a local tradesman. The manufacturer may choose to replace the product if the repair or the cost of repair is not feasible. The replacement product will be available for collection from the nearest reseller within 10 working days. The customer will bear the cost of assembly for the replacement product.

# GardenShed

2.99W x 1.51D x 2.08Hm

## IMPORTANT

### 1. Manufacturer's Disclosure

This warranty against defects shall not apply in the following situations:

- A) Where the product is not assembled in accordance with the instructions provided in the product kit.
- B) Where the product is used to store corrosive materials such as fertilizer, chlorine etc;
- C) Where the damage to the product is caused by storms.

### 2. Weatherproofing

This product is weatherproof to a certain level; however driving windy rain may cause the product to leak. Condensation may also occur in some weather conditions such as extreme heat or cold. The product should only be used for storing items such as gardening equipment and should not be used for articles that may be prone to damage if they come into contact with moisture.

We strongly recommend you use a waterproof sealant to fill any gaps or joins in order to minimise the risk of water entering.

### 3. Major Defects

If the manufacturer is satisfied that the defect is a major defect, the purchase price may be refunded in lieu of providing a replacement product or repairing the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law or Consumer Guarantees Act 1993 (NZ). You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.